


Procedure for updating Klipsch G-17 firmware over Wi-Fi.


You must connect your G-17 to your home network first to update firmware over Wi-Fi.

Operating System: Windows 7


1. Open **Internet Explorer**
2. Go to <http://www.klipsch.com/klipsch-gallery-g17-air> to download the latest firmware file (.BCD file)
3. Save the file on your Desktop
4. Click **Start** (Windows Logo)
5. Click **Computer**

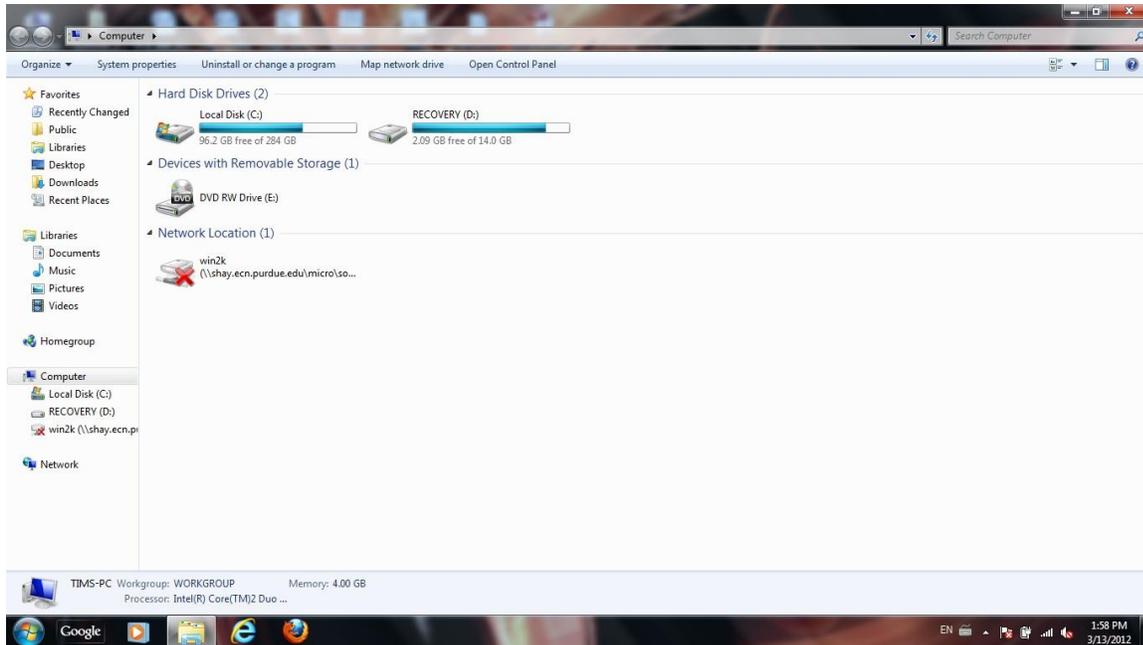


6. On the left side scroll to the bottom and click **Network**

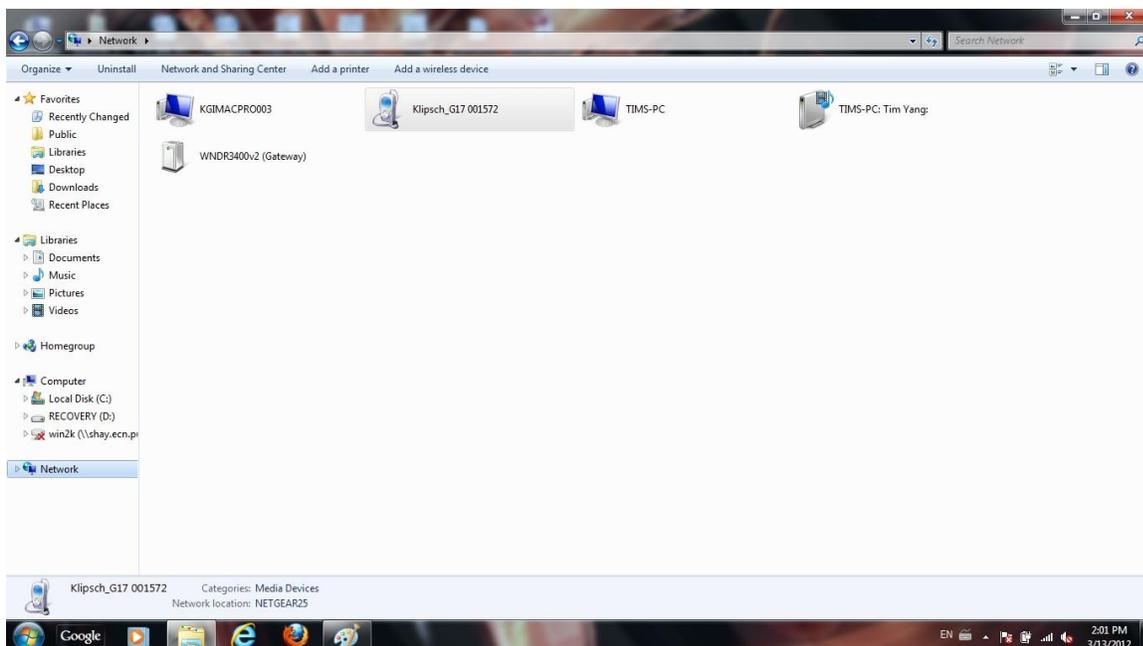


7. **Right click** on the Klipsch_G17 and click **View device webpage** (Internet Explorer should appear with the G-17's webpage)

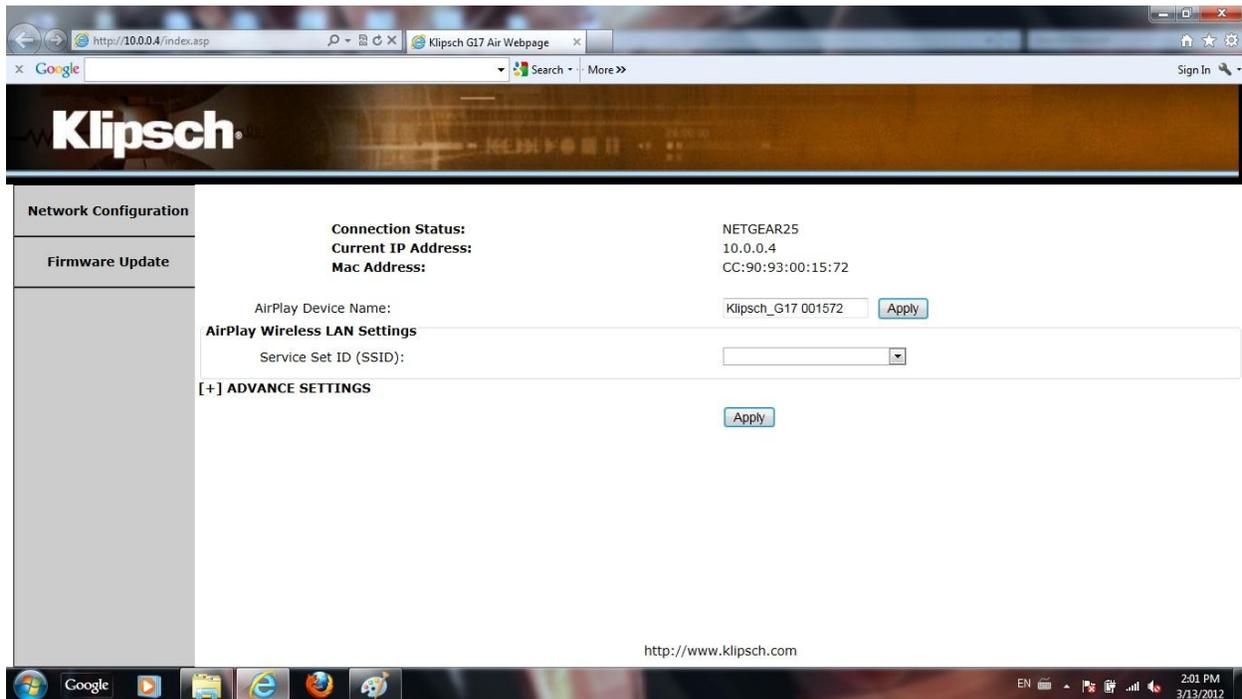

8. On the left side click **Firmware Update**

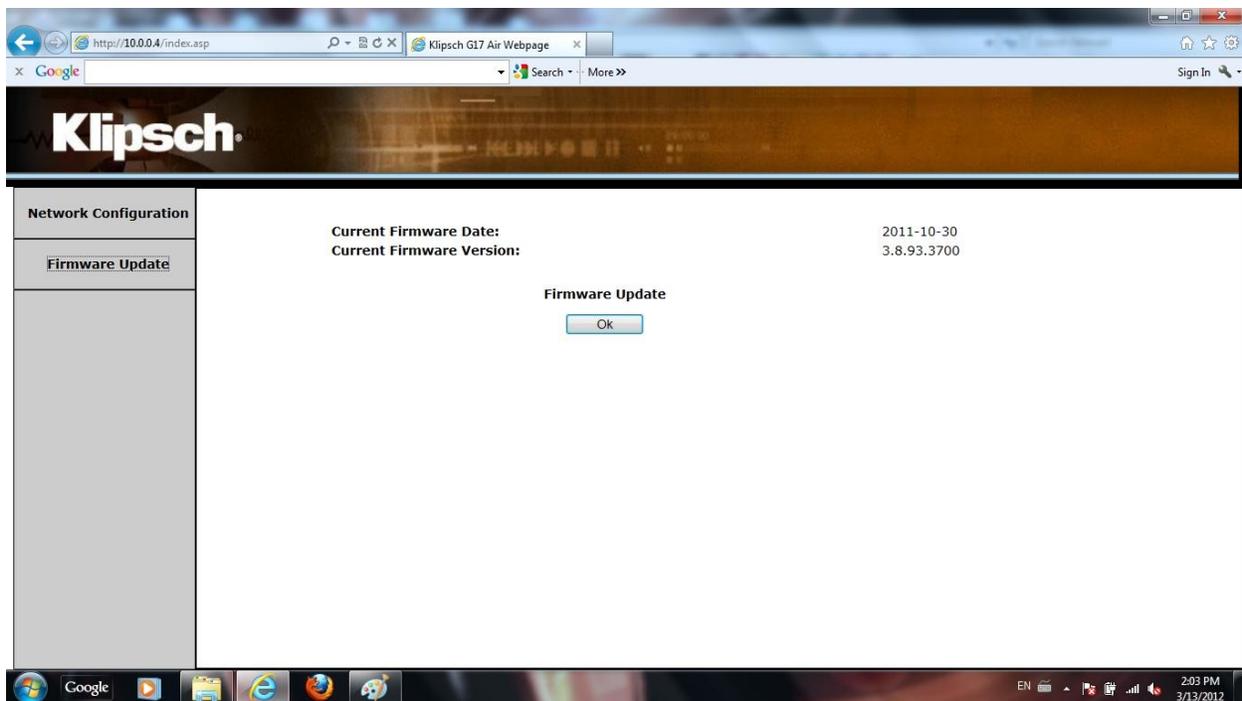

9. Click OK for Firmware Update

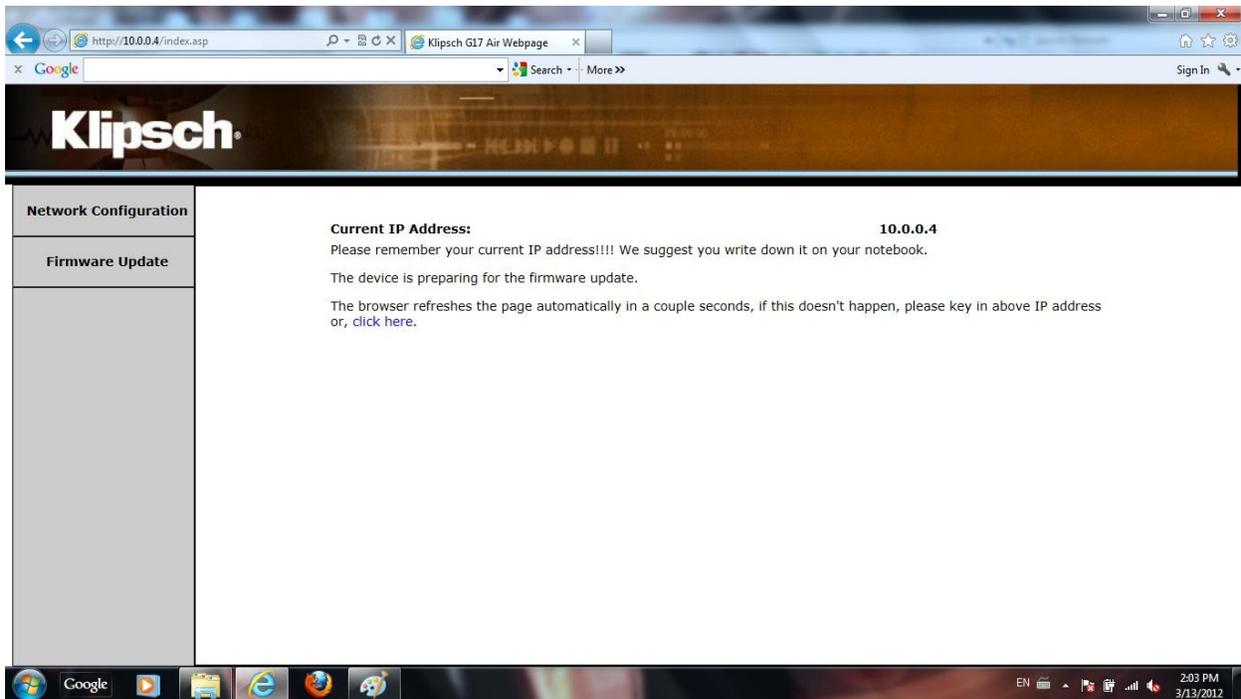


The screenshot shows a web browser window with the URL `http://10.0.0.4/index.asp`. The page title is "Klipsch G17 Air Webpage". The main content area displays the Klipsch logo at the top. Below the logo, there is a navigation menu with "Network Configuration" and "Firmware Update" options. The "Firmware Update" section is active, showing the following information:

Current IP Address: 10.0.0.4
Please remember your current IP address!!!! We suggest you write down it on your notebook.

The device is preparing for the firmware update.

The browser refreshes the page automatically in a couple seconds, if this doesn't happen, please key in above IP address or, click here.

10. Wait a couple seconds until G-17 is in updating mode NOTE: Click **click here** if your webpage does not reload

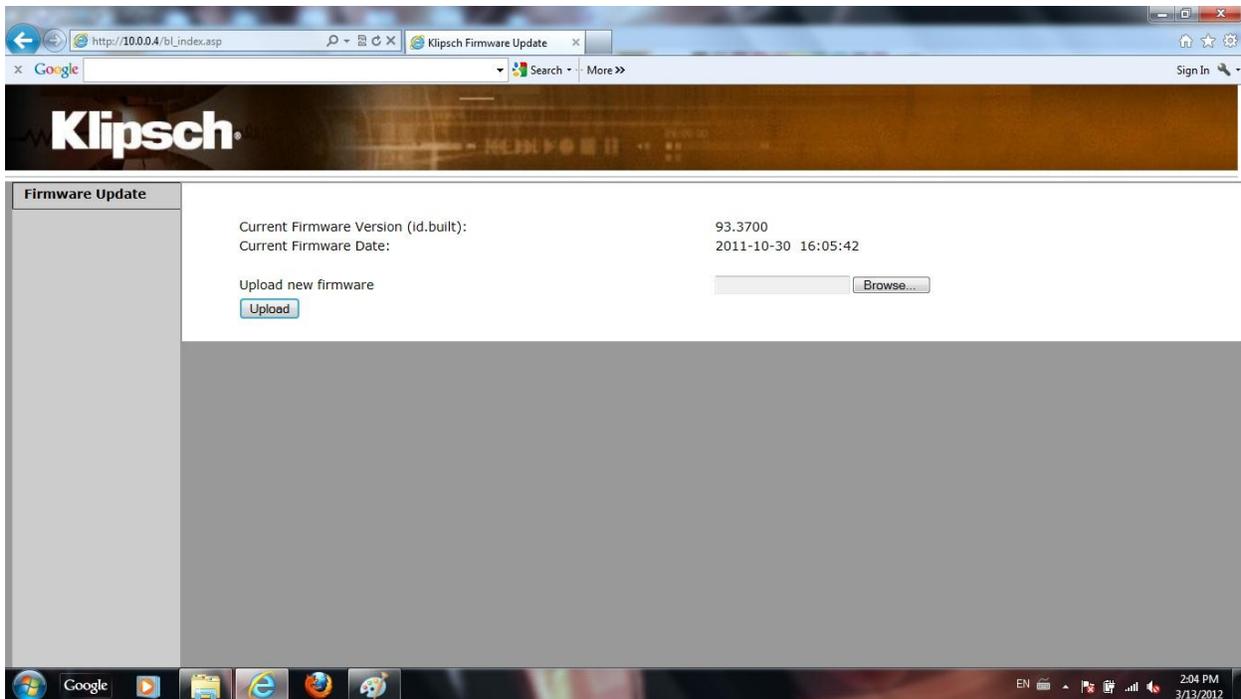


The screenshot shows the same web browser window, but the page has refreshed to the "Firmware Update" section. The main content area displays the following information:


Current Firmware Version (id.built): 93.3700
Current Firmware Date: 2011-10-30 16:05:42

Upload new firmware


11. Click **Browse**
12. Browse to the Desktop and select the downloaded file (.BCD file)
13. Click **Open** on selected firmware file

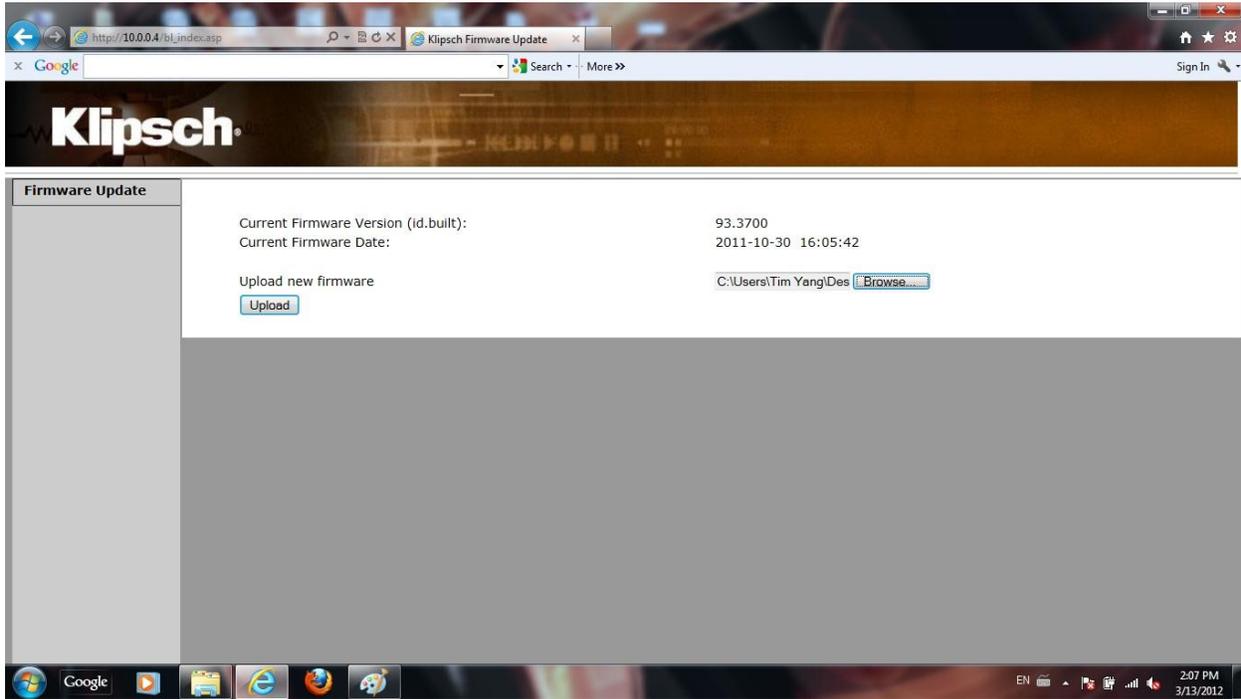


14. Click **Upload**

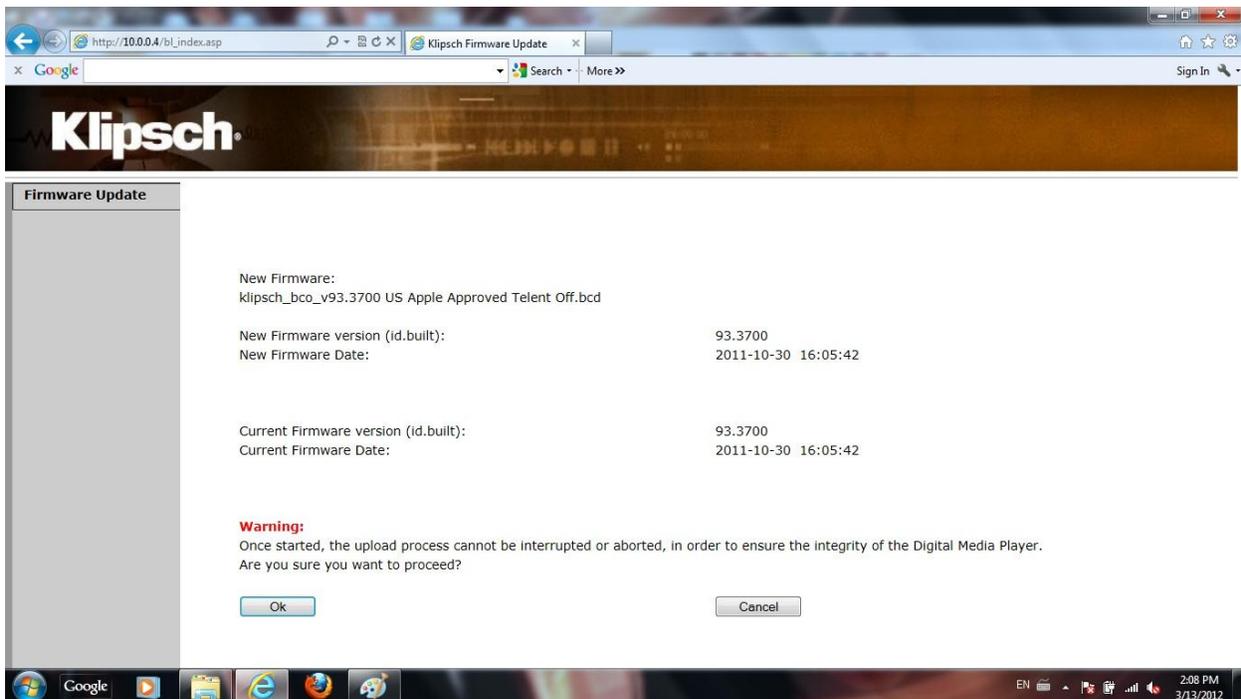

15. Click **Ok**

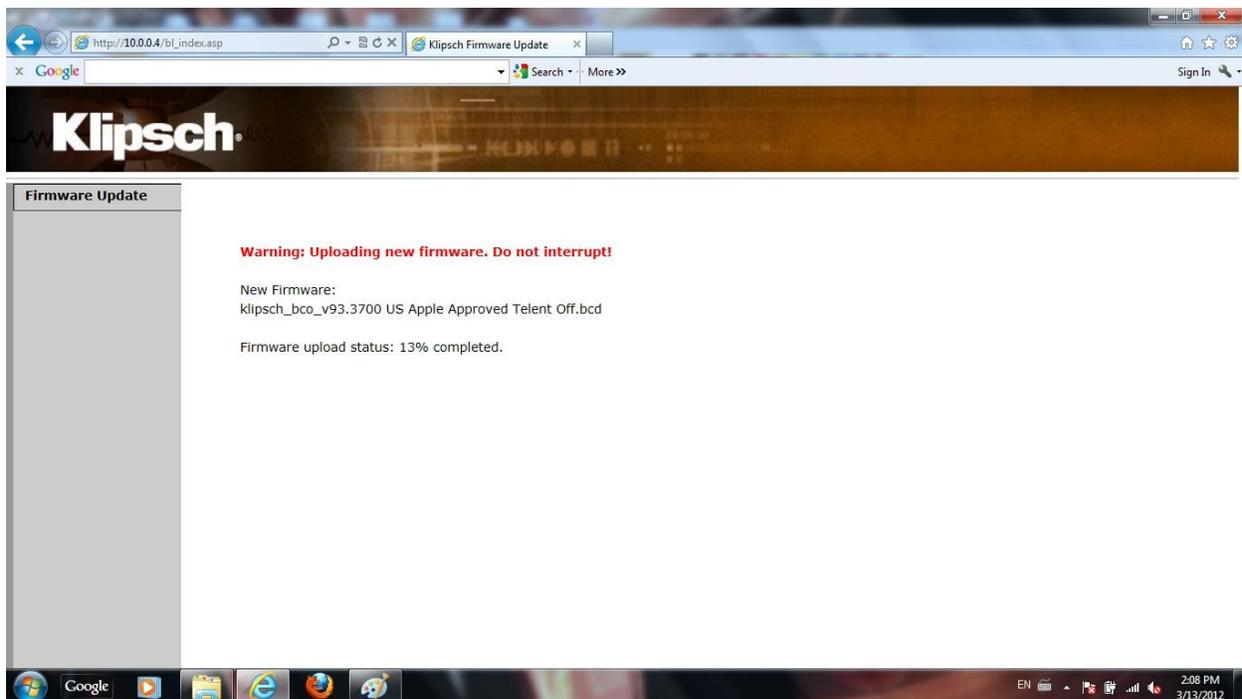

16. Once upload is complete G-17 will automatically restart

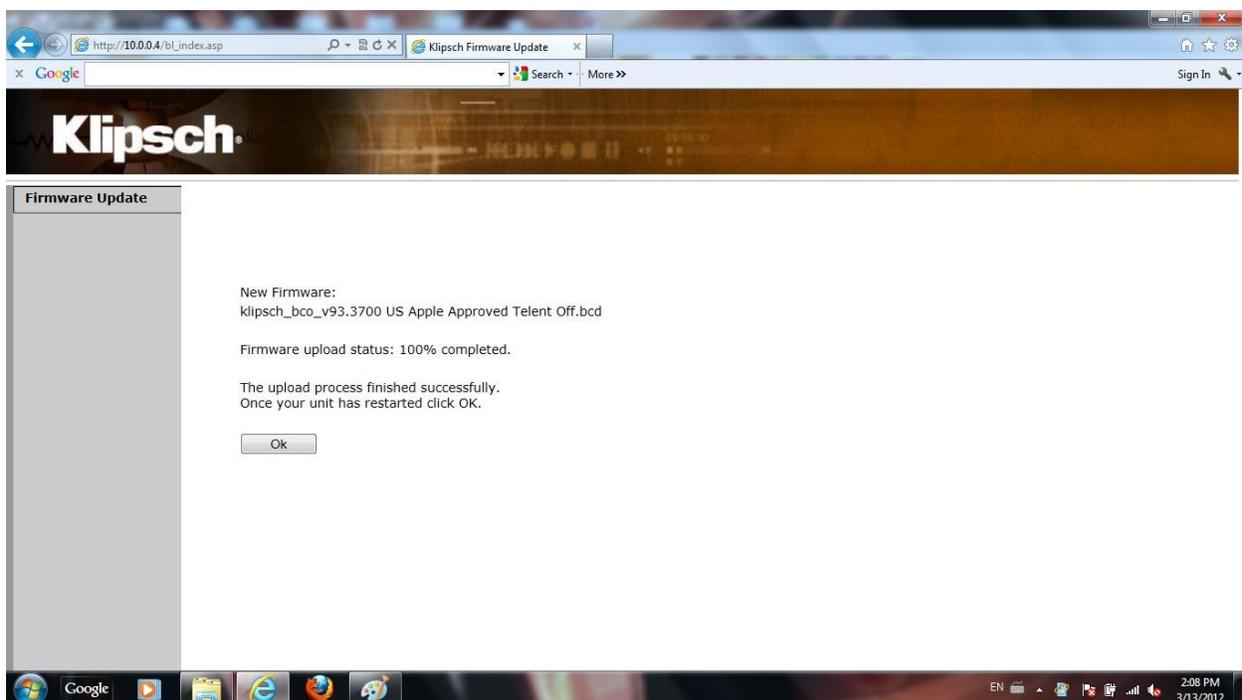

17. Once your unit has restarted click **Ok**

18. Click **Ok** to close Internet Explorer

19. You must re-setup your G-17 to your home wireless network (go to <http://www.klipsch.com/klipsch-gallery-g17-air> for ways to setup your G-17)