


Procedure for updating Klipsch G-17 firmware over Wi-Fi.


You must connect your G-17 to your home network first to update firmware over Wi-Fi.

Operating System: Windows XP


1. Open **Internet Explorer**
2. Go to <http://www.klipsch.com/klipsch-gallery-g17-air> to download the latest firmware file (.BCD file)
3. Save the file on your Desktop
4. Click **Start**
5. Click **My Computer**

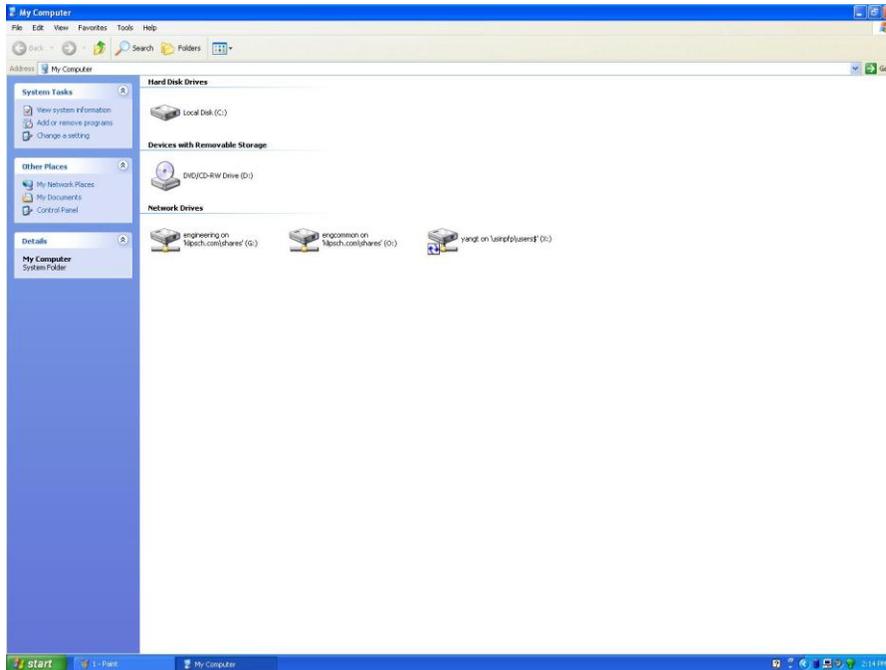


6. On the left side click **My Network Places**

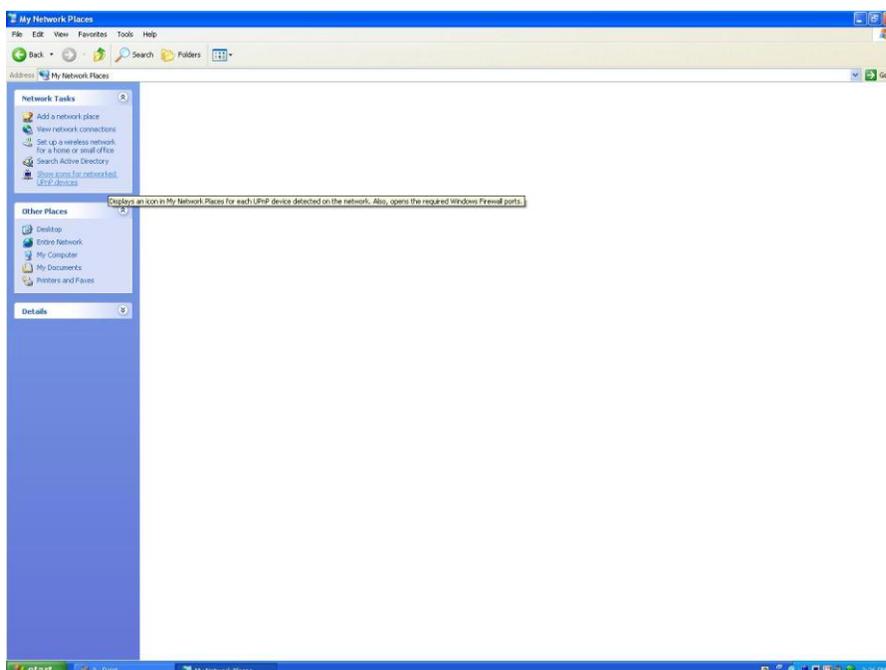



7. On the left side under Network Tasks click **Hide icons for networked UPnP devices**
NOTE: If your settings already display the network UPnP devices please skip steps 5-8 and move forward to step 9

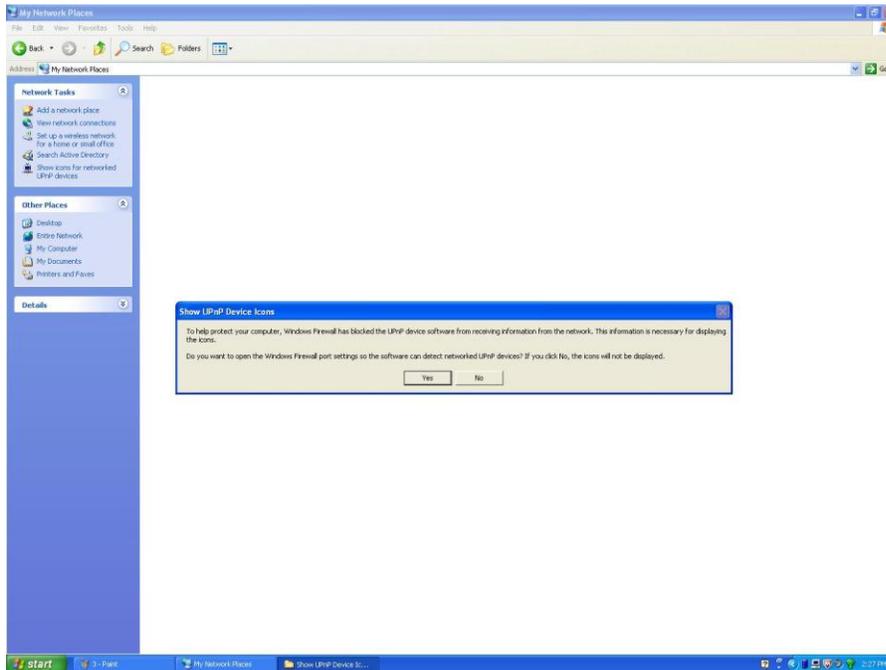


8. Click **Yes** when the message pops up (Windows XP will automatically run the configuration)

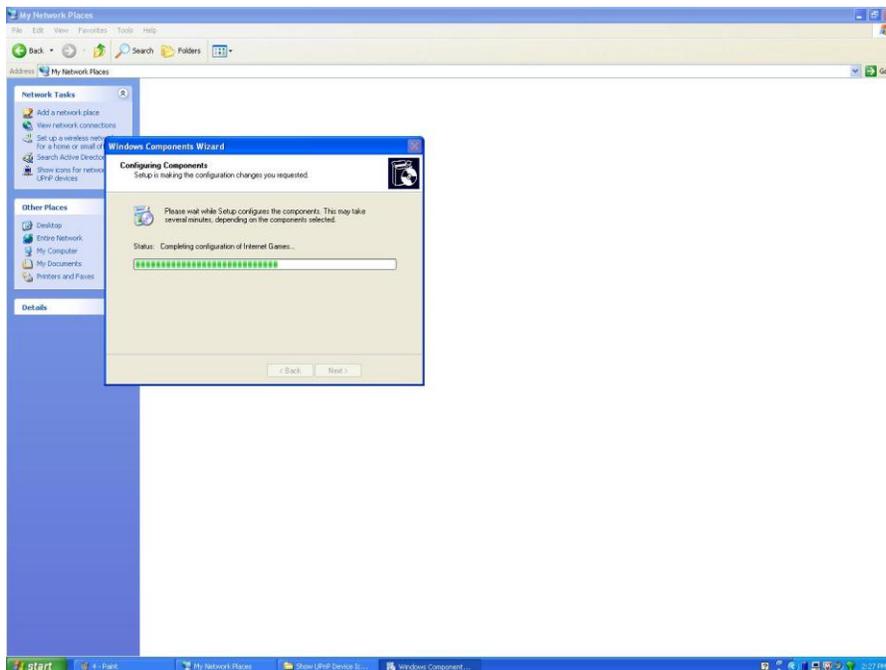


9. When My Network Place page Klipsch_G17 appears, double click **Klipsch_G17** (Internet Explorer should appear with the G-17's webpage)

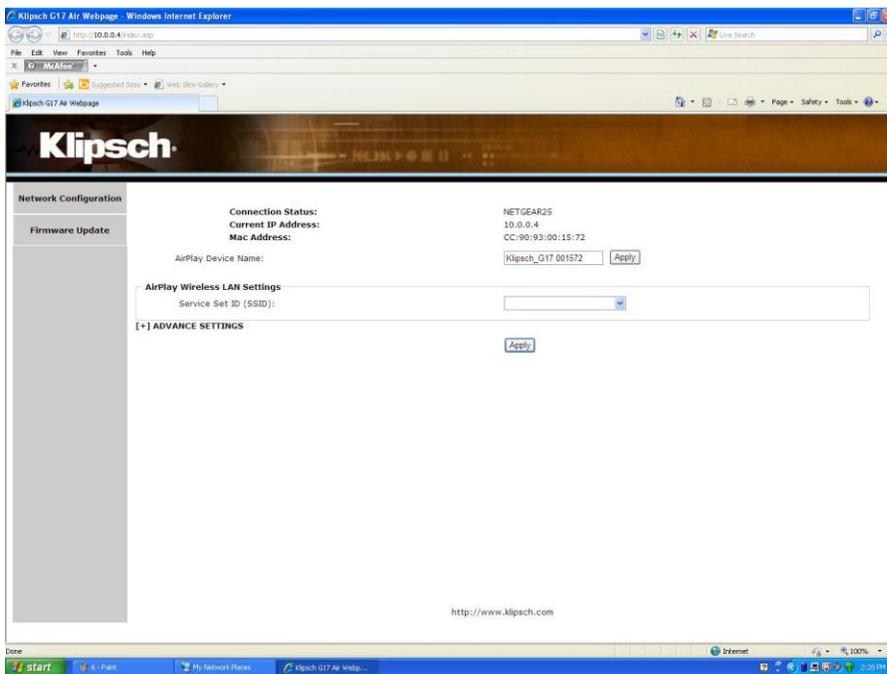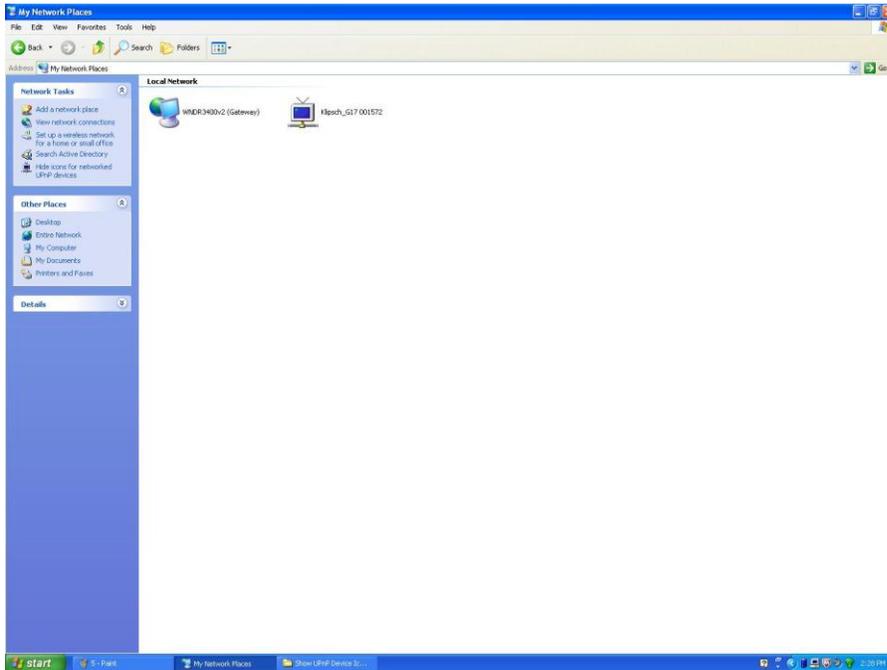


10. On the left side click **Firmware Update**

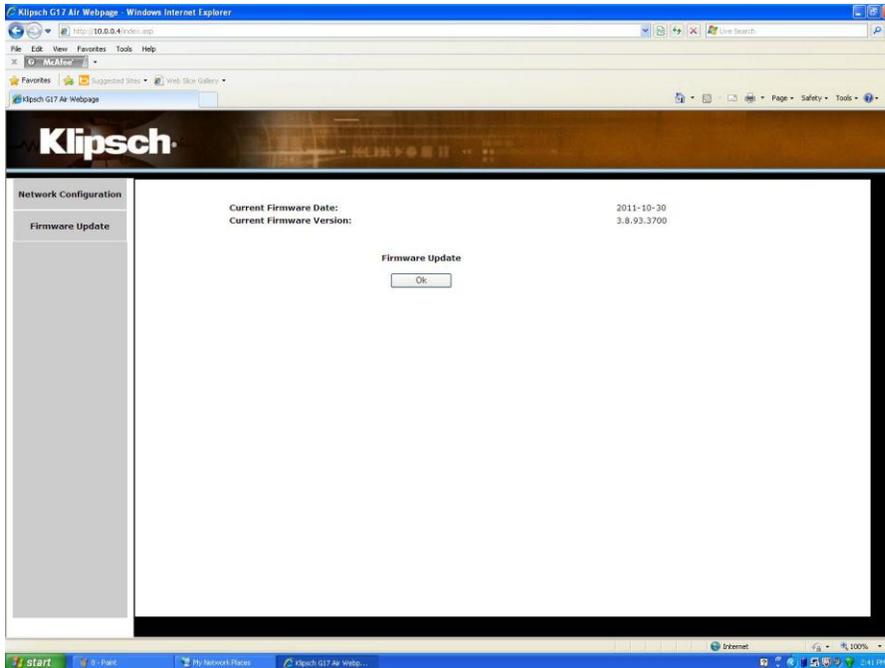


11. Click **OK** for Firmware Update

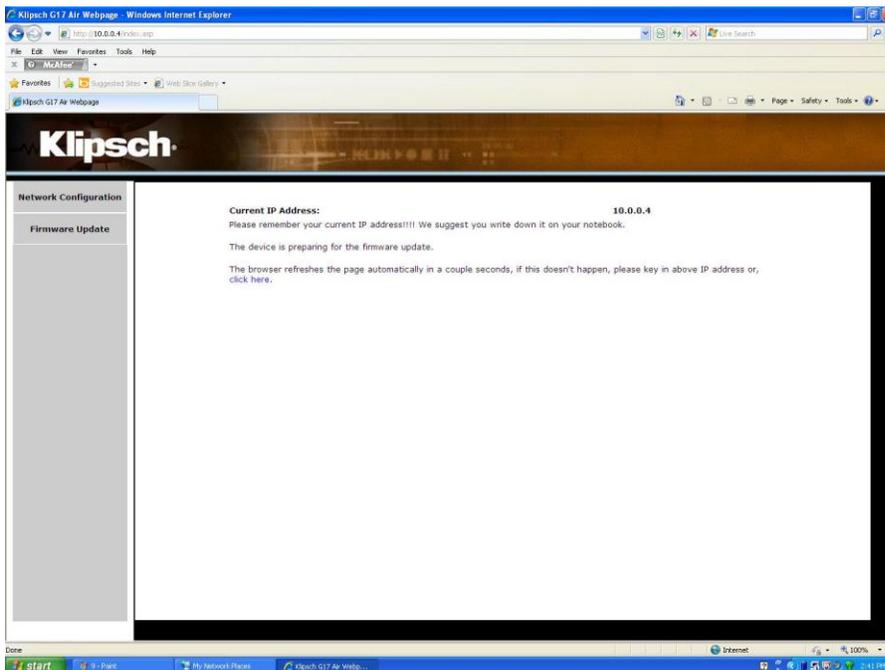


12. Wait a couple seconds until G-17 is in updating mode
NOTE: Click **click here** if your webpage does not reload

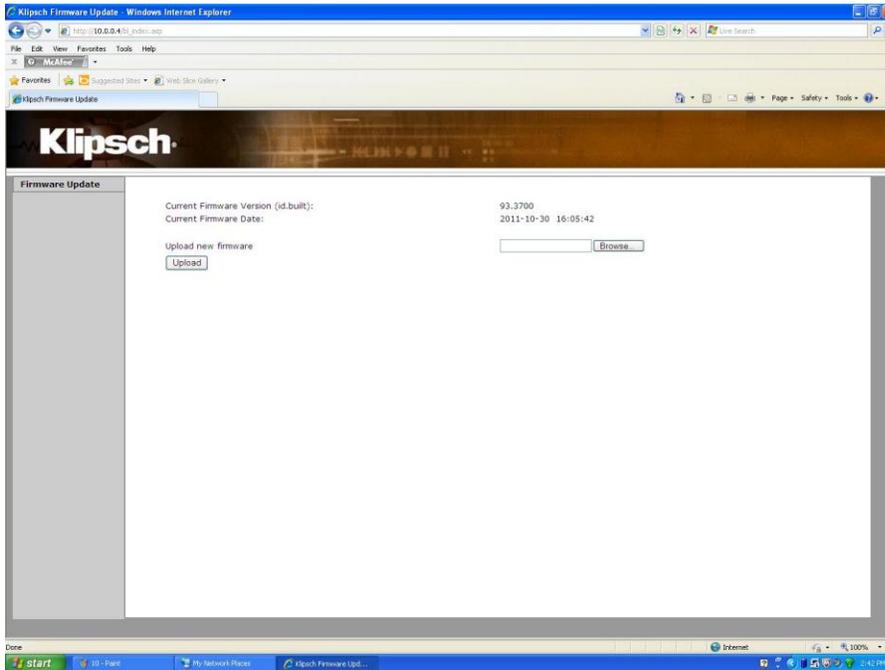


13. Click **Browse**
14. Browse to the Desktop and select the downloaded file (.BCD file)
15. Click **Open** on selected firmware file

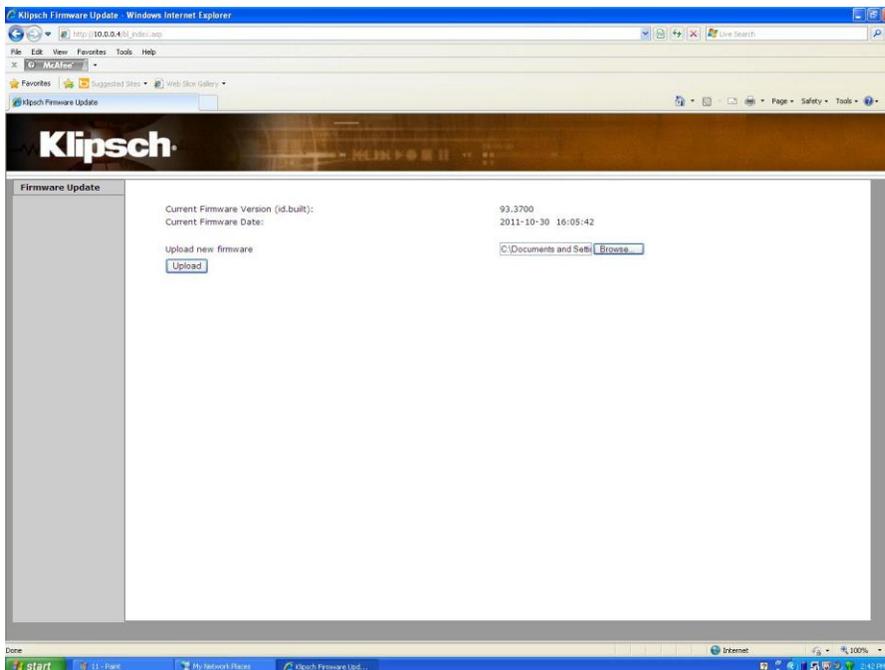


16. Click Upload

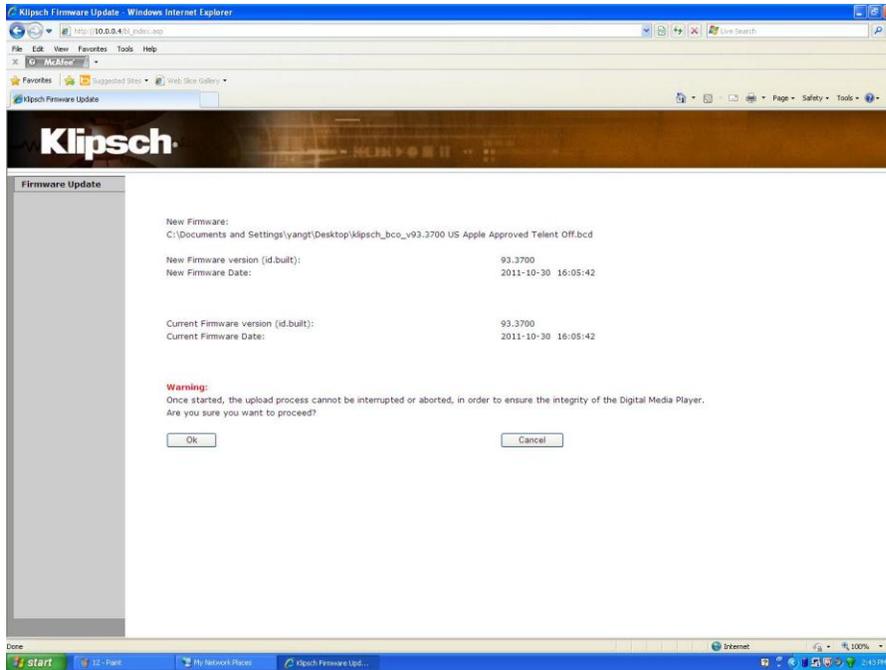

17. Click Ok

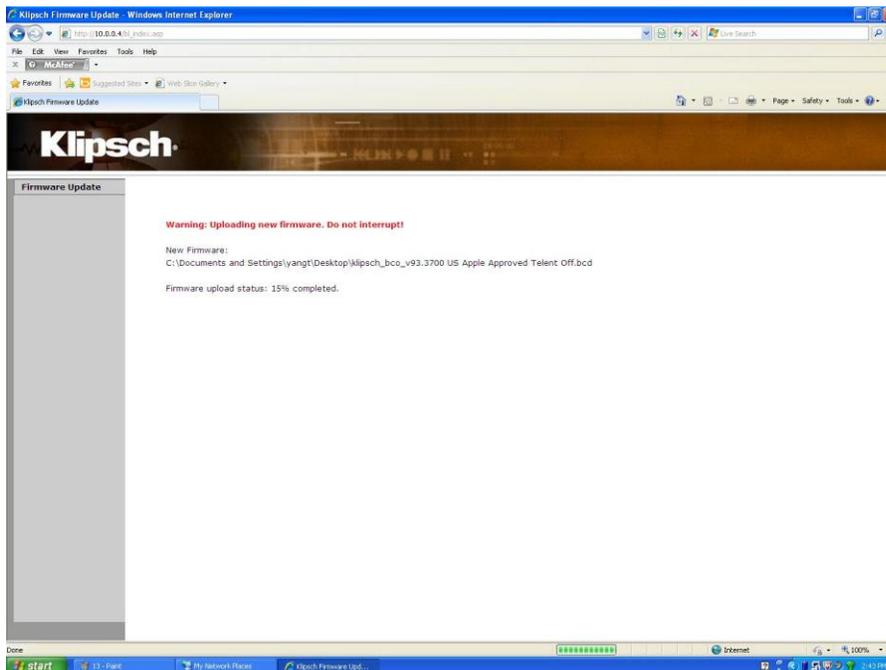

18. Once upload is complete G-17 will automatically restart

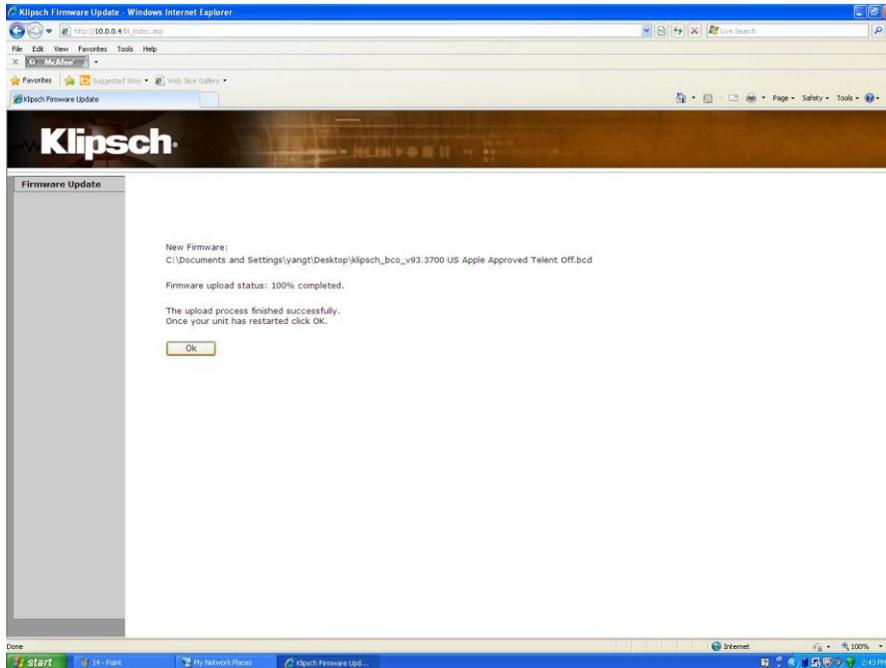

19. Once your unit has restarted click **Ok**

20. Click **Ok** to close Internet Explorer

21. You must re-setup your G-17 to your home wireless network (go to <http://www.klipsch.com/klipsch-gallery-g17-air> for ways to setup your G-17)