


Procedure for updating Klipsch G-17 firmware over Wi-Fi.


You must connect your G-17 to your home network first to update firmware over Wi-Fi.

Operating System: MAC OS X


1. Open **Safari**
2. Go to <http://www.klipsch.com/klipsch-gallery-g17-air> to download the latest firmware file (.BCD file)
3. Save the file on your Desktop

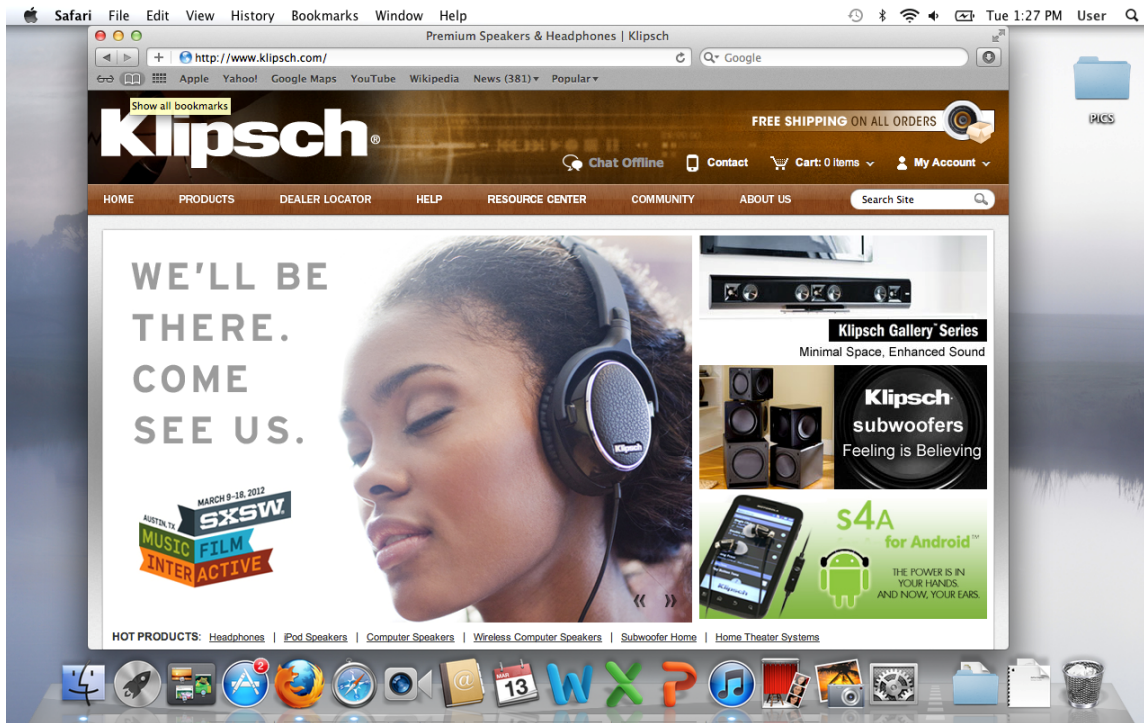


4. Click **Safari** tab

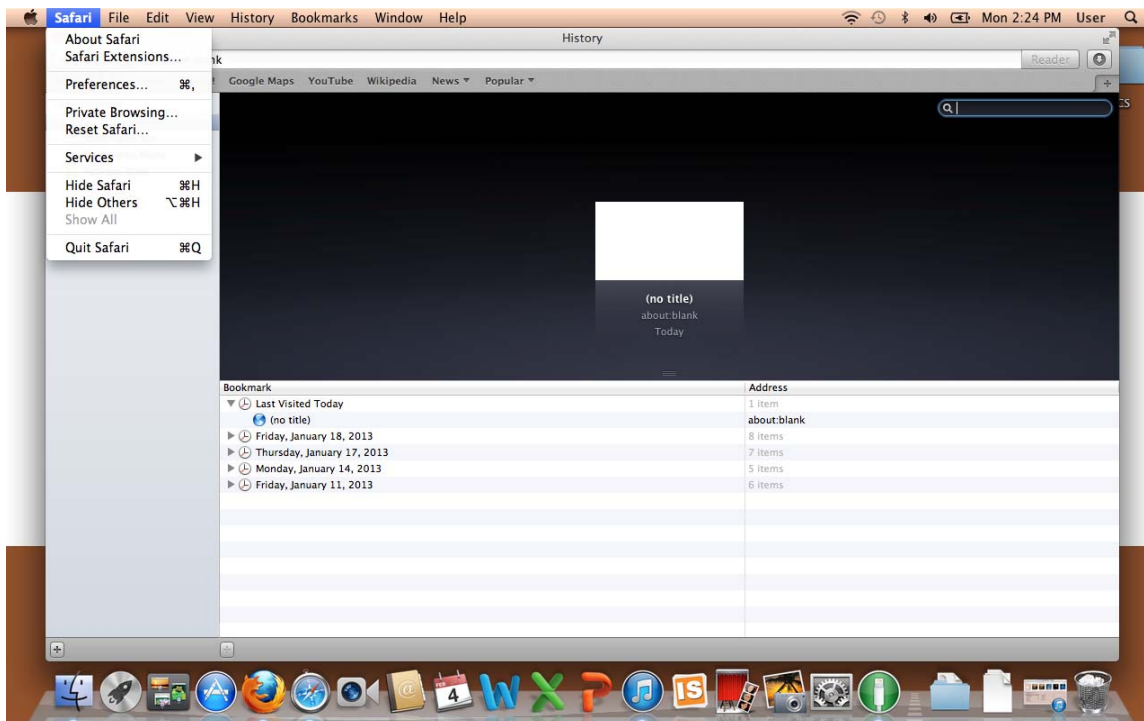


5. Click Preferences

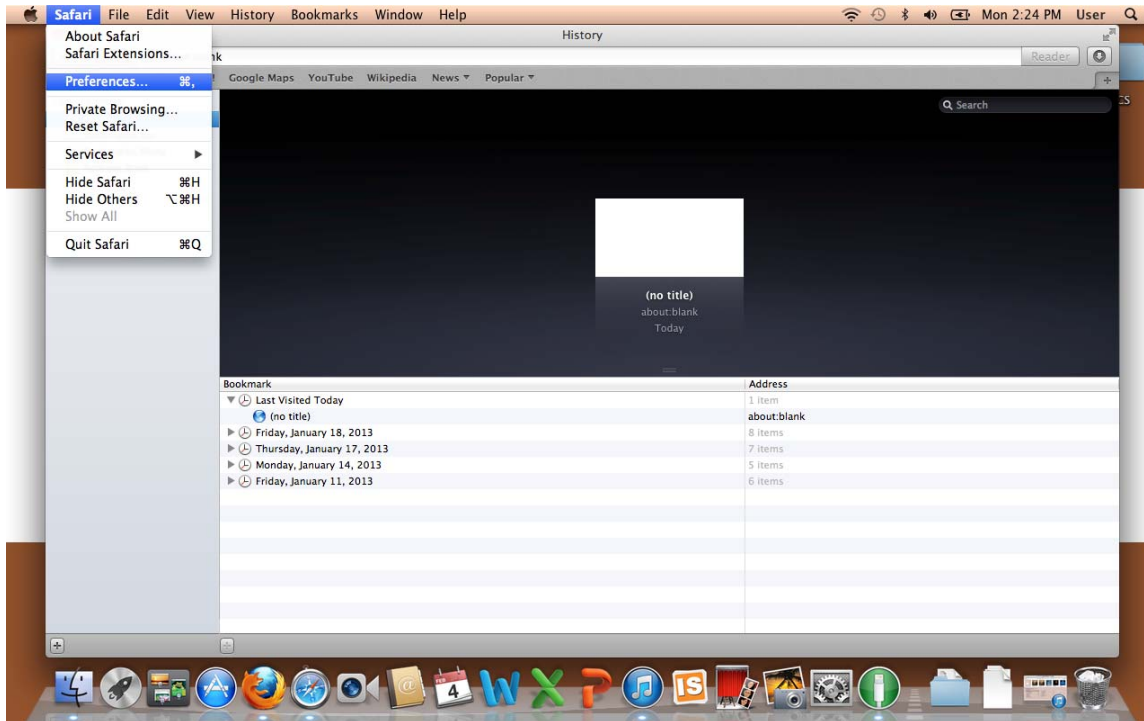


6. Click Bookmarks tab

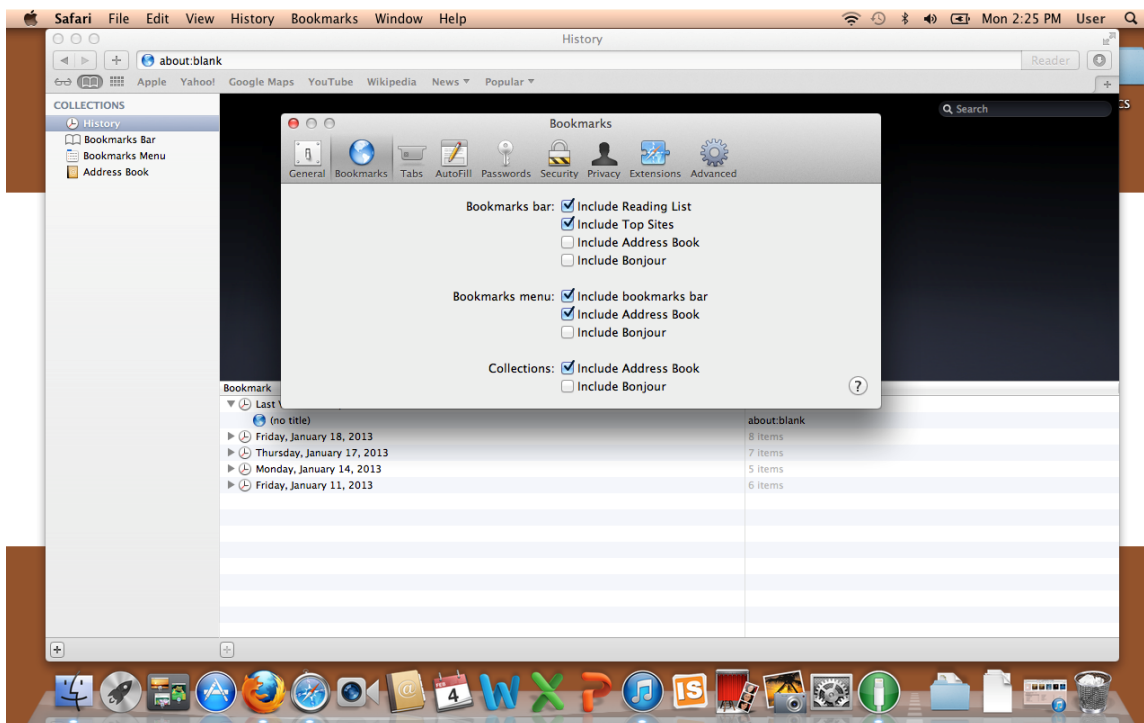


7. Next to Collections section check **Include Bonjour**

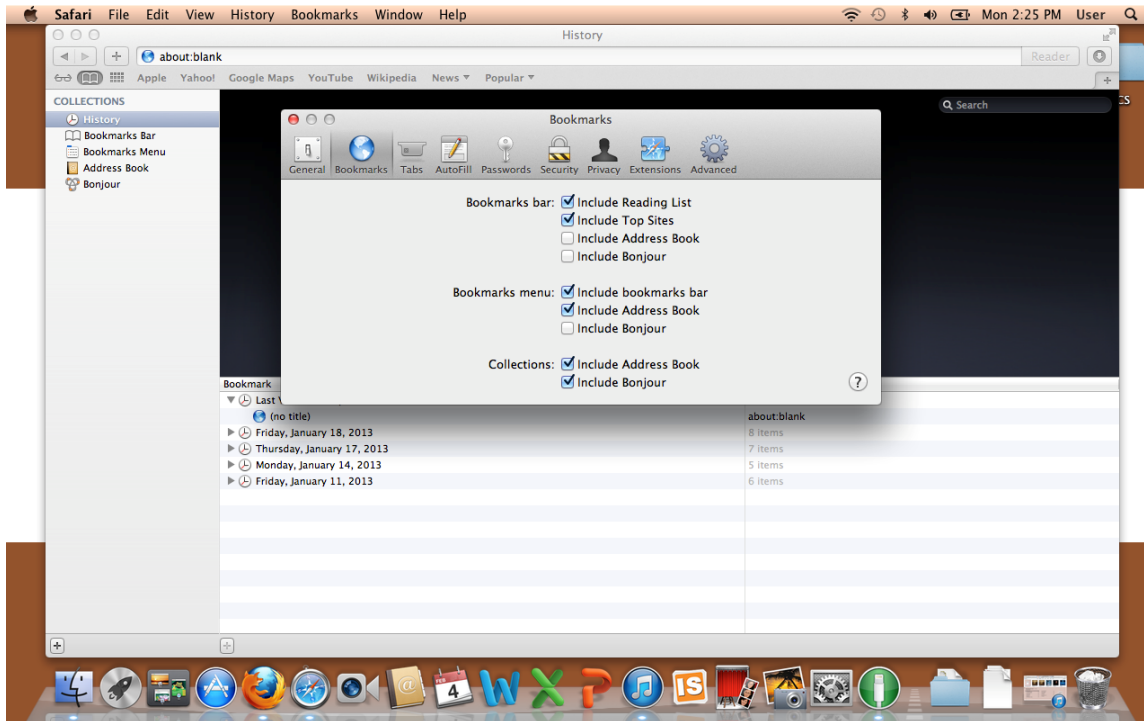


8. Close out Preferences
10. Click **Show all bookmarks**

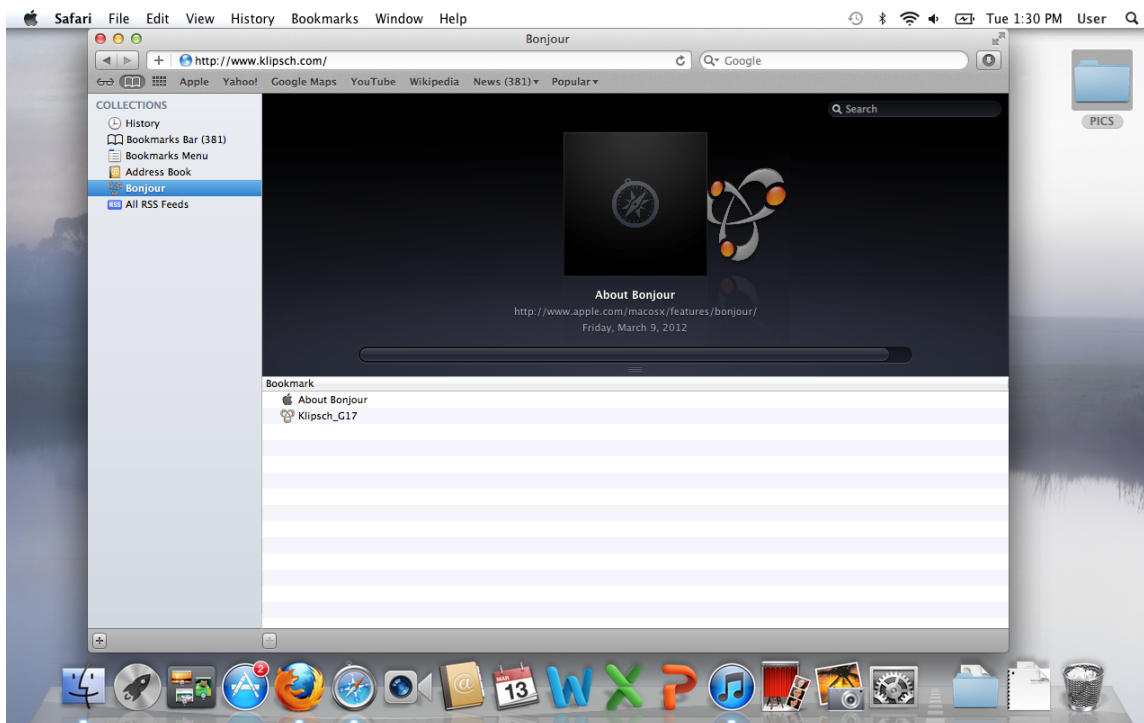


11. On the COLLECTIONS tab click **Bonjour**
12. Under Webpages double click on **Klipsch_G17** to open G-17's webpage (Safari should appear with G-17's webpage)

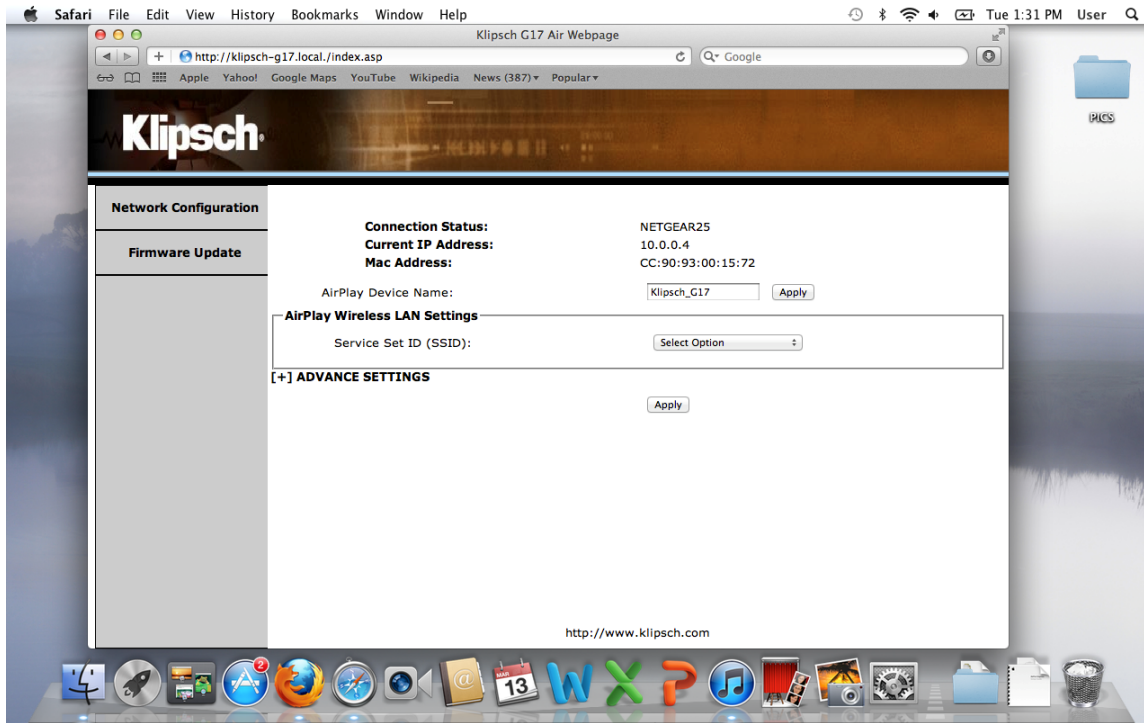


13. On the left side click **Firmware Update**

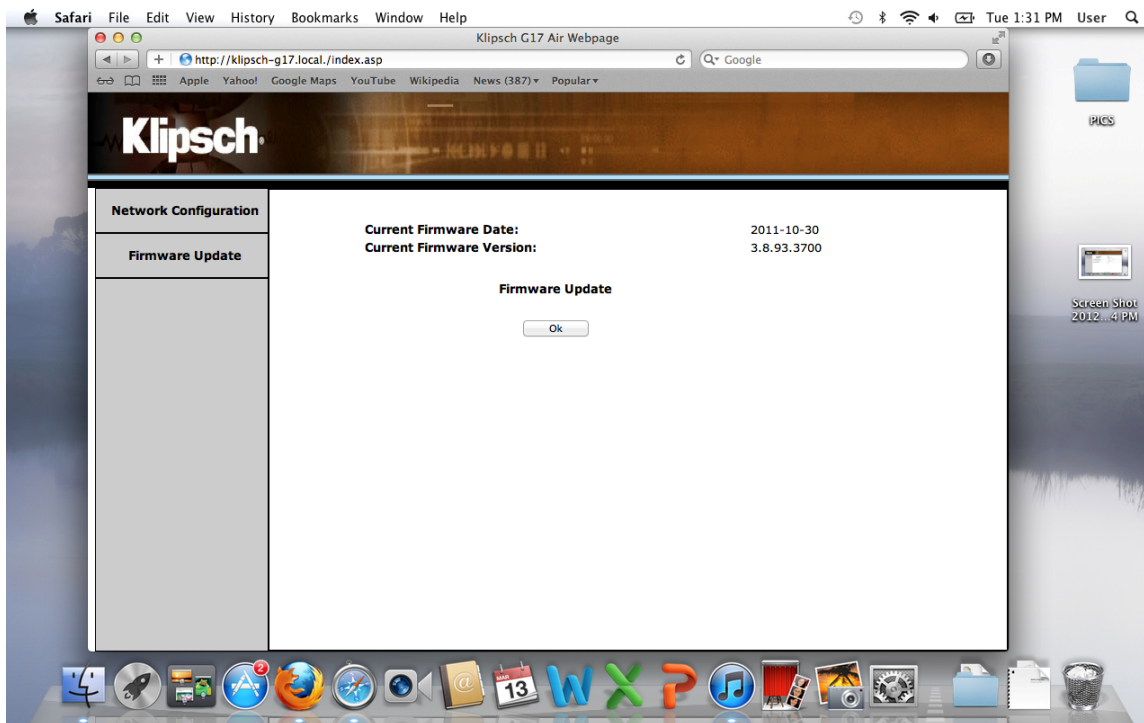

14. Click **OK** for Firmware Update

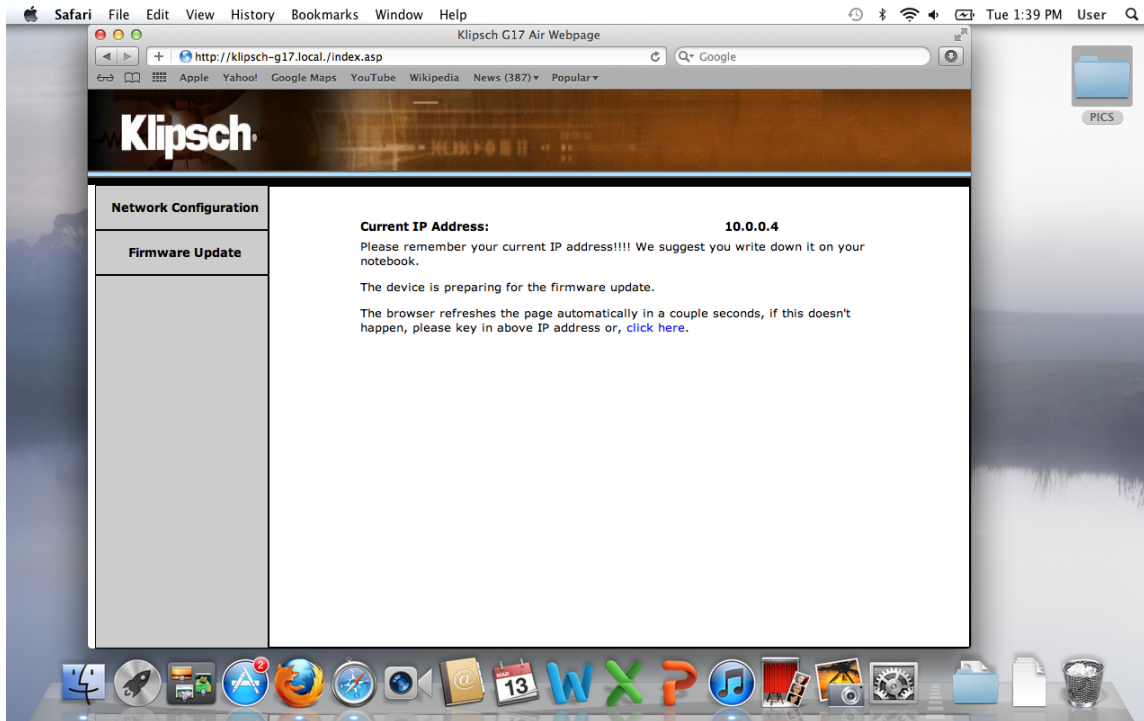


15. Wait a couple seconds until G-17 is in updating mode NOTE: Click **click here** if your webpage does not reload

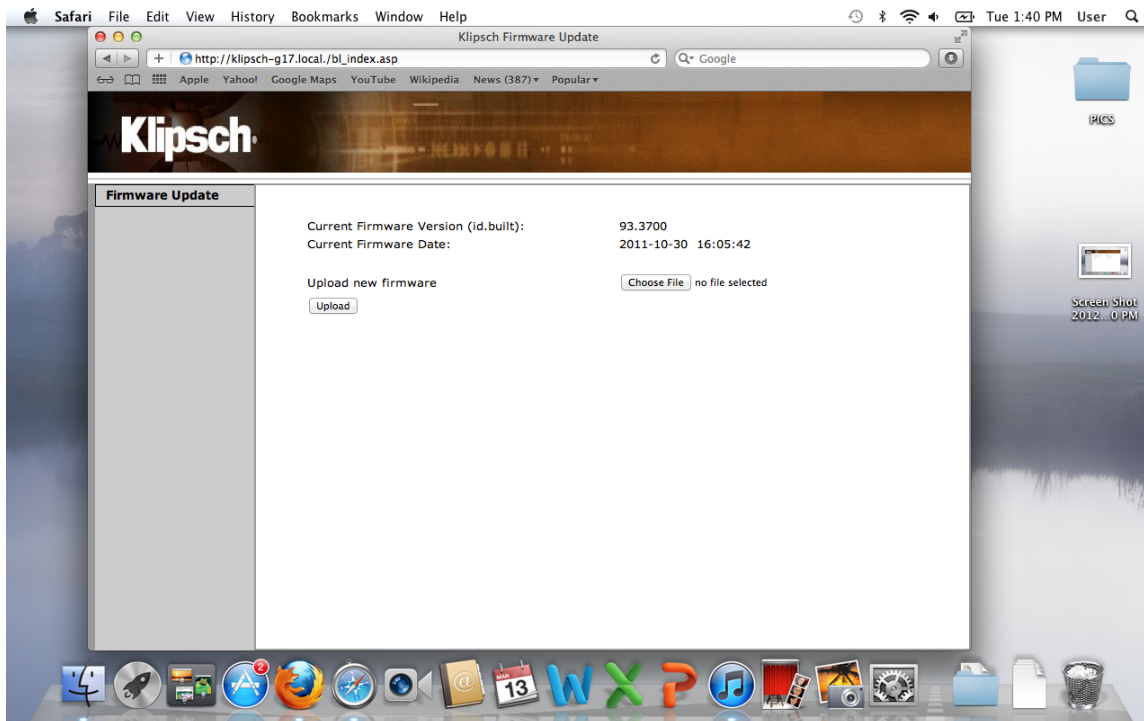


16. Click **Choose File**

17. Browse to the Desktop and select the downloaded file (.BCD file)


18. Click **Choose** on selected firmware file

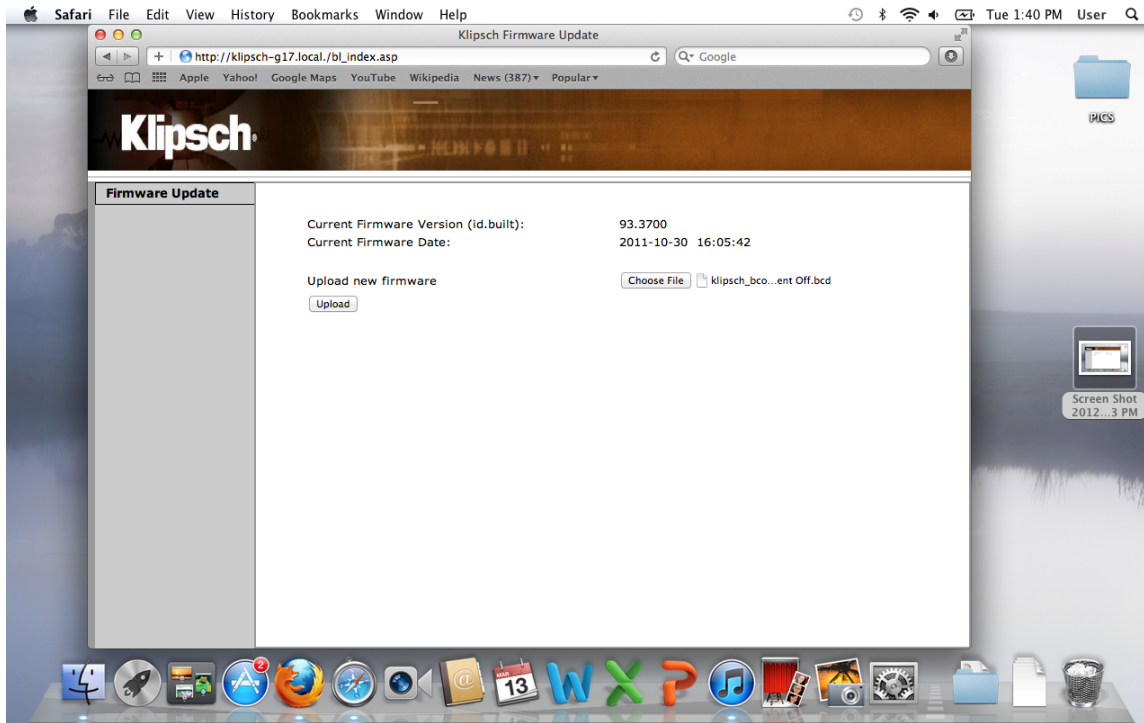


19. Click **Upload**

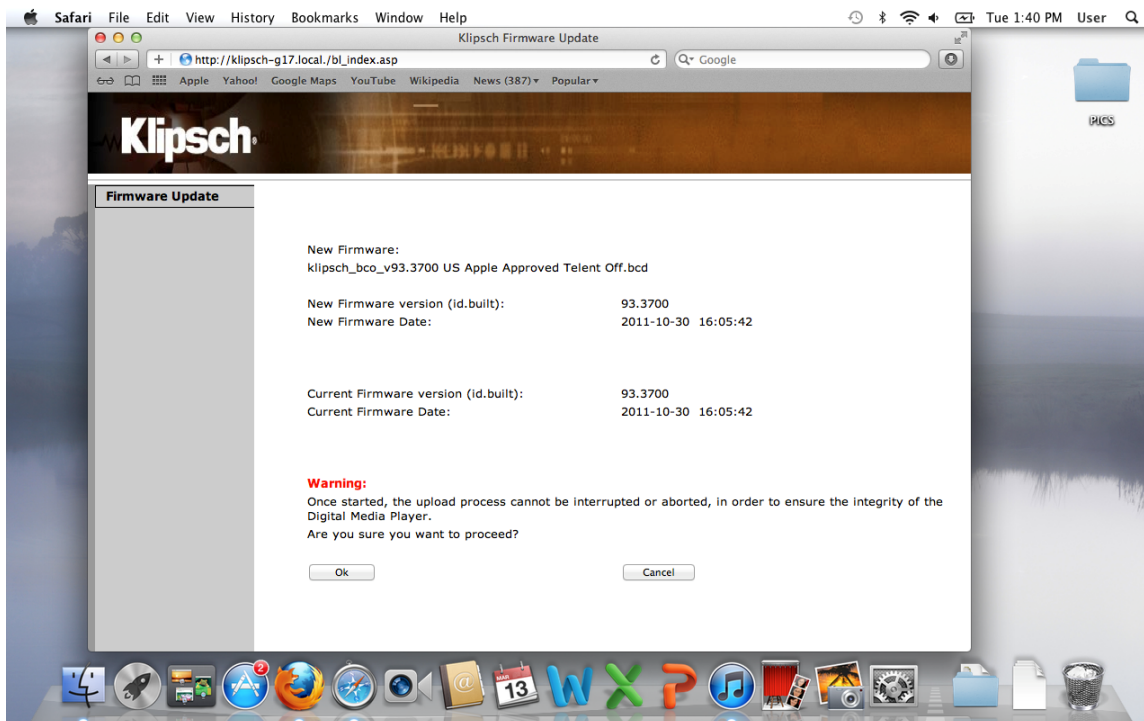

20. Click **Ok**

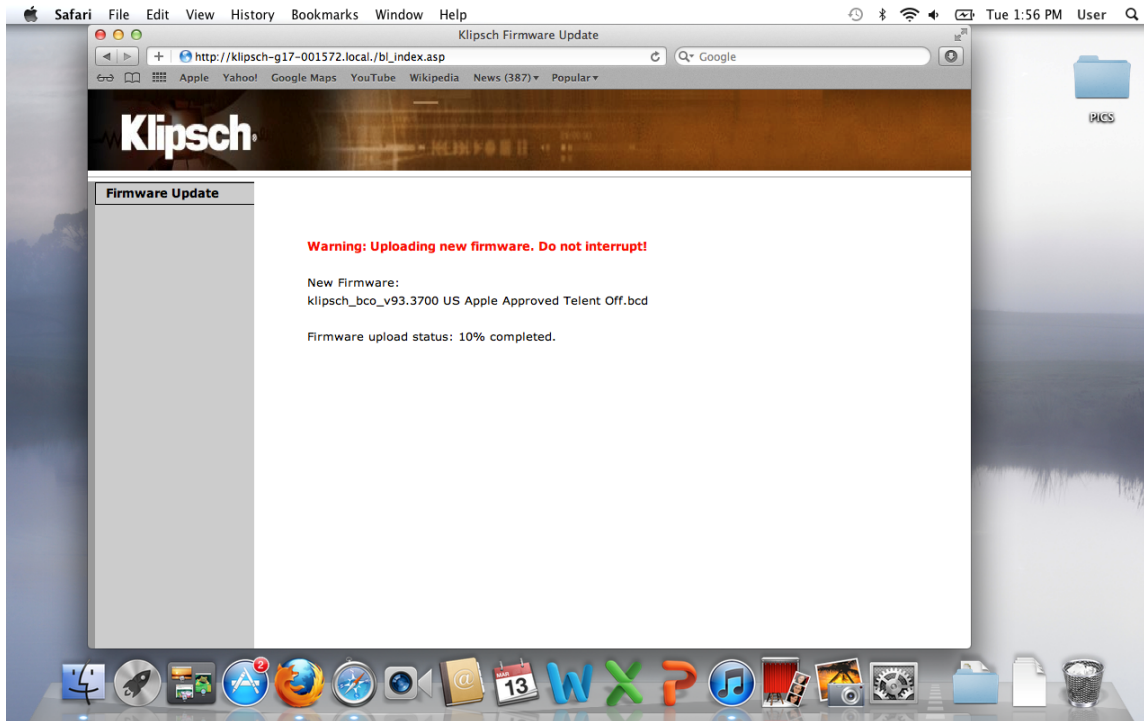

21. Once upload is complete G-17 will automatically restart

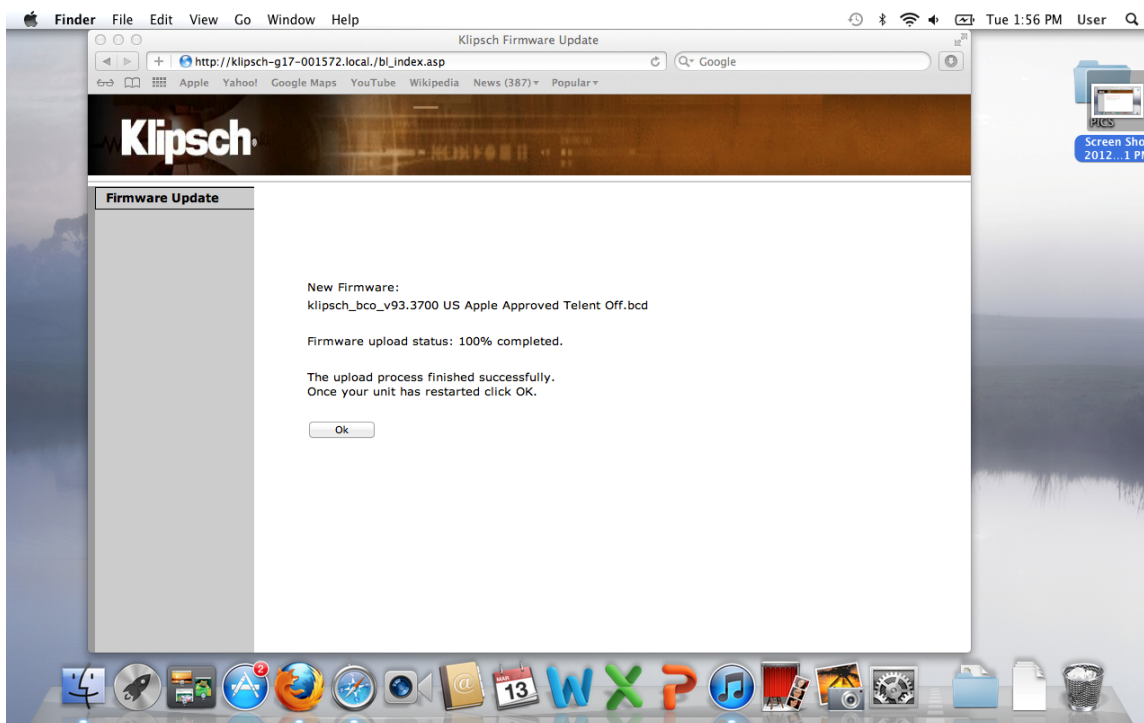

22. Once your unit has restarted click **Ok**

23. Click **Ok** to close Safari

24. You must re-setup your G-17 to your home wireless network (go to <http://www.klipsch.com/klipsch-gallery-g17-air> for ways to setup your G-17)