

 
# AVD4.6

User Guide




Jamo®

## Component overview

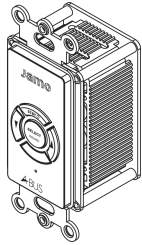


### KP4.6

 Wall mounted keypad in each zone. Can be used in both main and sub-zones.

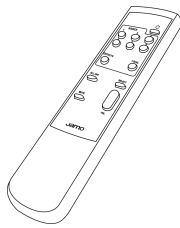


### RC4.6

 Basic system remote control. Can control same functions as KP4.6.

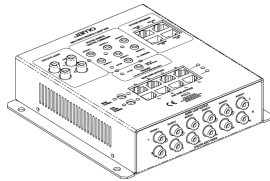

### AM4.6

 Audio module. Located next to the source equipment and distributes 2 channel audio to all zones.

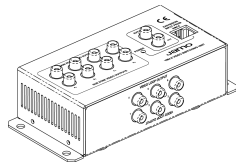

### VM4.6 (optional)

Video module. Located next to the source equipment and distributes video to all zones.

## Congratulations

Congratulations on your new Jamo AVD4.6 distribution system.

The many different options and features of your new audio and video\* distribution system will be a source of pleasure for you for many years to come.

The Jamo AVD4.6 system is a distributed, multi-room home entertainment system capable of delivering high quality audio and video to multiple rooms and locations in your home.

 
After it is installed, you have access to all your centrally located audio and video equipment through stylish wall-mounted control panels or remote controls from each location with a control panel installed. Sound is delivered to in-wall or ceiling speakers (or conventional speakers if preferred) and video is delivered to televisions or monitors.

\*Video distribution requires the optional VM4.6 module installed.

## Content

Component overview	2
KP4.6 wall control unit	4
RC4.6 system remote control	5
System details	6+7
Limited warranty	7


## KP4.6 wall module

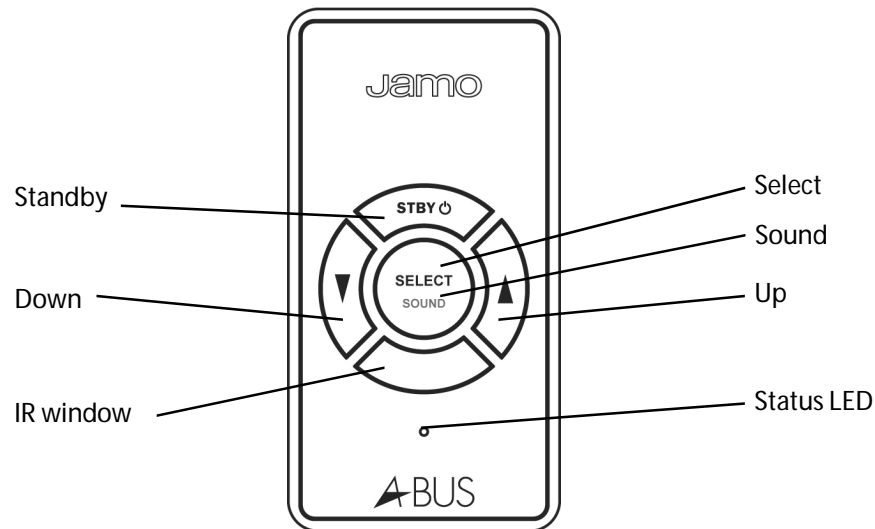

Standby	Short push to turn keypad/system on. Short push to turn keypad off. Long push (approx. 2 sec.) to turn system off (ALL OFF)*
Down	Adjusts volume, bass and treble down Adjusts balance to left and fader to sub-woofer/amplifier
IR Window	Receives signals from remote controls Blinks red to indicate signal received
Select	Short push to change source*
Sound	Long push to enter Sound Adjustment functions (page 5)
Up	Adjusts volume, bass and treble up Adjusts balance to right and fader to main speakers
LED	Keypad on: Solid green Keypad off: Off Keypad in mute: Blinks green Adjusting volume or sound: Blinks orange End points on volume or sound: Blinks red Change source: Blinks twice for each push Sound adjustment functions: Blinks red

\*Only in Jamo enhanced A-BUS mode. See page 5 of AVD4.6 Installation Guide.

## RC4.6 remote control

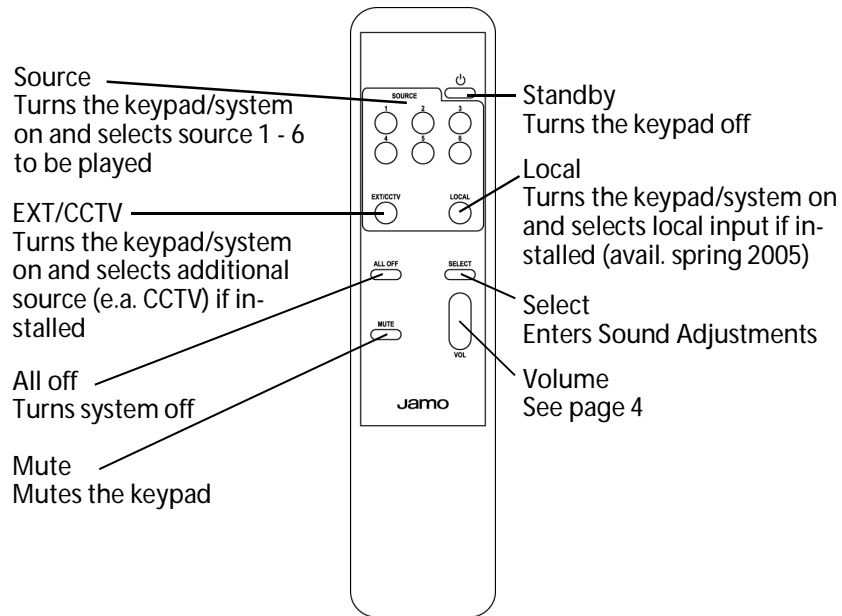 

### Volume adjustment

The LED blinks orange when adjusting volume up and down. When reaching full volume the LED blinks red. When reaching minimum volume (Mute) the LED blinks green.

### Sound adjustments

To enter Sound Adjustments push and hold Sound (4 sec.) to reach the desired function. The LED blinks red once for Bass, twice for Treble, three times for Balance and four times for Fader. If still held it will return to Bass and cycle through again. Start to adjust the desired function within 2 sec. or the system goes back to volume adjustment (LED green).

When adjusting Bass, Treble, Balance and Fader the LED blinks orange. The led blinks red when reaching the top or bottom end and blinks green at the mid point (no adjustment to sound).

If no adjustment is made the system will automatically go back to volume adjustment (LED green) after 2 sec.

### System details

Main zone/room details	Sub zone/room details
1 _____	_____
2 _____	_____
3 _____	_____
4 _____	_____
5 _____	_____
6 _____	_____
7 _____	_____
8 _____	_____
9 _____	_____
10 _____	_____
11 _____	_____
12 _____	_____
13 _____	_____
14 _____	_____
15 _____	_____
16 _____	_____

AM4.6 Serial No/s. \_\_\_\_\_

VM4.6 Serial No/s. \_\_\_\_\_

## System details

### Source equipment details

Source 1 \_\_\_\_\_

Source 2 \_\_\_\_\_

Source 3 \_\_\_\_\_

Source 4 \_\_\_\_\_

Source 5 \_\_\_\_\_

Source 6 \_\_\_\_\_

## Limited Warranty

Jamo loudspeakers and accessories are covered by a limited warranty in respect to manufacturing and equipment defects. Other claims are not covered. This warranty is a national warranty in accordance with relevant legislation. Period of the warranty is as stated below and is in effect from the date of purchase.

Customer sales slip with date of purchase is the only document needed for warranty claims.

Jamo warranty on all loudspeakers and accessories is seven (7) years except in-wall and in-ceiling loudspeakers, which carry Limited Lifetime Warranty. Electronics (receivers, amplifiers, screens, distribution systems, sub-woofer amplifier etc.) carries a two (2) year warranty.

For a complete Statement of Limited Warranty see page 11 in the AVD4.6 Installation Guide.



[www.jamo.com](http://www.jamo.com)

