

Linking multiple AM 4.6s together

You link the hubs with Cat5 as follow:

Hub 4 out to hub 3 in.

Hub 3 out to hub 2 in.

Hub 2 out to hub 1 in.

You DO NOT plug hub 1 out to hub 4 in.

Hub 1 is the hub you have the emitters plugged into