

# LRC4.6

## Learning Remote Control

### User Guide

---

For use with the Jamo multi-room system

Editable device names

Clock and Alarm features

Backlit display and keys

Hard coded dedicated Jamo multi-room system buttons

Learning storage buttons compatible  
with nearly all source equipment

High power IR output for extended transmission range

Local banks for control of bedroom TV etc

Macro facility

Cloning feature

**Jamo**<sup>®</sup>

## INTRODUCTION

### **Congratulations on your new Jamo LRC4.6 Learning Remote Control.**

The LRC4.6 is a learning remote control designed to work either with a full Jamo A-BUS multi-room system or a Jamo A-BUS keypad when used with compatible A-BUS Ready™ outputs on receivers or amplifiers.

The LRC4.6 has 8 device banks (SOURCE 1 etc.), 6 of which are related to the 6 inputs on the Jamo system plus 2 further Local banks which can be used to control sources local to the room in which the remote is being used. The 8 device bank buttons have been pre-coded to send the correct Jamo codes to change sources on our hubs but these buttons can also be taught new codes if required.

There are 6 dedicated hard-coded buttons that control the features of the Jamo A-BUS keypads: Standby, CCTV (only used when a Jamo VM4.6 video switcher is installed), Select, Mute, Vol/Function Up and Vol/Function Down.


In addition there are 38 buttons per device bank that can be taught any IR code from the source equipment's own remote controls (e.g. a CD player remote). This allows the LRC4.6 to control all functions of the source equipment in addition to controlling the Jamo system itself.

The 8 device banks and all storage button names can be renamed so that any desired text can appear in the LCD display window.

A Macro function allows the LRC4.6 to send out a chain of IR commands actioned by a single button-press. All 38 storage buttons and even the device bank buttons can contain a Macro of up to 20 steps.


A clock is provided which together with a Timer feature allows the LRC4.6 to wake the user up to the SOURCE 1 input at any desired time.

# UNIT DIAGRAM

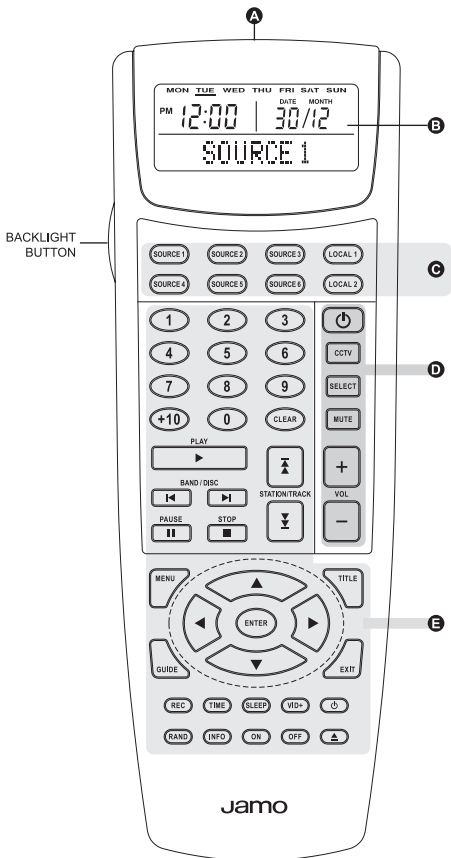

- A** INFRARED TRANSMITTER AND LEARNING EYE
- B** DISPLAY (LCD) WINDOW
- C** DEVICE BUTTONS
- D** DEDICATED JAMO MULTI-ROOM SYSTEM BUTTONS
- E** STORAGE BUTTONS
- F** LEARN/MACRO BUTTON
- G** EDIT BUTTON
- H** CLEAR BUTTON
- I** RESET BUTTON
- J** ALARM/TIMER ON/OFF

#### REAR OF LRC4.6

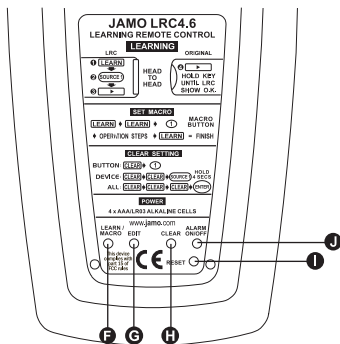

#### INSTALLING BATTERIES

Use only Alkaline type batteries.

 
- (1) Remove the battery cover.
- (2) Insert 4 AAA/LR03/sum-4 batteries.
- (3) Close the battery cover until it clicks.

In case of battery replacement, all stored data is retained in non-volatile memory whilst the batteries are removed.

## SETTING UP THE REMOTE CONTROL

### REAL TIME CLOCK / DATE / MONTH / YEAR / WEEKDAY SETTING

1. On the back of the remote press EDIT once (using a paperclip or similar), to enter Real Time Clock mode. Display shows "CLOCK?" flashing. Press the ▲ or ▼ buttons to start editing.




2. Follow the steps below to set the desired values:



Keep holding ▲ or ▼ buttons to go through the 12/24 hour time format



For all settings pressing ▲ or ▼ scrolls through the desired values

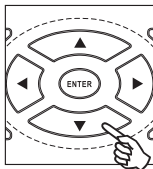

Pressing ◀ or ▶ steps forwards or backwards through the Setting steps


Holding a cursor key will fast advance the function

3. When finished press the EDIT button or wait 15 seconds to exit Real Time Clock mode.

## TIMER / ALARM

 The LRC4.6 has a timer function which allows the user to program a time to activate SOURCE 1 (e.g. to wake up to). When the programmed time is reached the remote automatically sends out the SOURCE 1 device code, a special wake-up code and any code programmed into the "1" button in the SOURCE 1 device bank. For instance, this allows the remote to activate a Jamo keypad in that room, select SOURCE 1 and preset 1 (e.g. preferred radio station). The "1" button can also contain a Macro if desired (e.g. starting a CD player).

1. The remote needs to be positioned so that it has a clear line of sight to the Jamo keypad.



JAMO LRC4.6

Clear line of sight

up to 4 metres  
(12 feet)



JAMO KP4.6


2. On the back of the remote press EDIT twice (using a paperclip or similar), to enter Timer set mode. Display shows "TIMER?" flashing. Press the ▲ or ▼ buttons to start editing.



3. Follow the steps below to set the desired values:



Press ▲ or ▼  
buttons to scroll  
through characters.

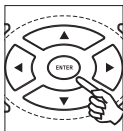

Press ► to move forward,  
◀ to move back a character.

Days can be set to  
weekdays, weekends  
or every day of the week



4. Once the timer has been set a small alarm clock symbol appears on the display to indicate the timer is active.



5. When finished press the EDIT button or wait 15 seconds to exit Timer set mode.

Note: The Alarm On/Off button can be used at any time to turn on or off the timer/alarm without affecting the set time or days.

## LEARN MODE

 Note: Learning a new code will always overwrite the current data in a storage button including a Macro if one has been previously programmed.


1. On the back of the remote press the LEARN button once to enter Learn mode (using a paperclip or similar). Display shows "LEARN" flashing.

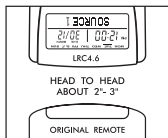


Place the original source remote (CD, DVD etc) facing the LRC4.6, head to head, about 2-3 inches (5-8 cm) apart.



 2. Press a device button (e.g. SOURCE 1) to select the device bank into which you wish to teach codes.



3. "LEARN" appears flashing on the display. Press the desired storage button (e.g. button 1). "LEARN" will stay static on the display.

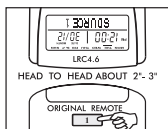

4. On the original remote, press and hold the button whose IR code you want to teach into the LRC4.6. Hold the button until the LRC4.6 display reads "OK!".



When "OK!" appears, learning is complete and "LEARN" flashes again. Repeat steps 3-4 to learn another button. If no storage button is pressed after 8 seconds, the remote will automatically select the next storage button for you.

Note: When the remote is scanning for a code to be learnt it is not possible to exit Learn mode or select a different storage button. Wait 8 seconds until the remote times out and "LEARN" begins flashing again.

Continued on Page 8.

## LEARN MODE cont.



 
If the display shows "ERROR", please ensure the correct steps are followed and repeat.



If the display shows "NO DATA", there was no signal from the original remote. Check the remotes are aligned, the original remote's batteries are good and repeat the process.

5. When finished press the LEARN button to exit Learn mode.

Note: It is NOT possible to teach new codes (or Macros) into the 6 dedicated Jamo System buttons, as they are always needed to control the Jamo keypads.




## A-BUS READY™ AND LEARNING CODES INTO DEVICE BUTTONS

By default the Jamo LRC4.6 device buttons have been pre-coded to send the correct Jamo codes to change sources. However these buttons can be taught new codes if required.

EXAMPLE:

A-BUS Ready AV receivers and amplifiers which can connect to Jamo A-BUS keypads without an Jamo hub being required.

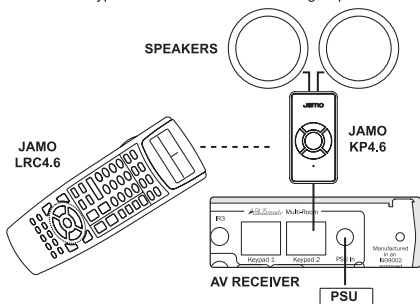


In this example, the receiver provides source selection, so the LRC4.6 device buttons should be reprogrammed with the receiver's source/device codes.

Continued on Page 9.




## A-BUS READY™ AND LEARNING CODES INTO DEVICE BUTTONS cont.

 1. On the back of the remote press the LEARN button once to enter Learn mode (using a paperclip or similar). Display shows "LEARN" flashing.



2. Press and hold for 5 seconds the device button (e.g. SOURCE 1) into which you want to teach the new code (and replace the pre-code). "LEARN" will stay static on the display.

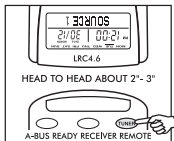

3. Press the appropriate source/device button on the AV Receiver remote, and hold until the display reads "OK!".




4. When "OK!" appears learning is complete and "LEARN" flashes again. Repeat steps 2-3 to learn the other source/device buttons.

Note: Learning new codes into the source/device buttons replaces the Jamo codes that have been pre-coded into them.

To recover the original codes, perform a Clear Key or Clear Device on each device button in turn. This will reset its code to the dedicated Jamo source codes. Alternatively a Clear All operation will reset the whole remote to its default factory settings including all pre-codes. See the CLEARING STORED DATA section for more information.


## BUTTON LABEL EDITING

 When device or storage buttons are pressed, the display shows a default label. The LRC4.6 however also allows users to change these labels (up to 8 characters). Please see AVAILABLE CHARACTER TABLE for the available character set.



1. On the back of the remote press the EDIT button 3 times (using a paperclip or similar) to enter Label editing mode. "LABEL?" will appear on the display.

 2. Press the button whose display name you want to change.



3. The display shows the name with the first character flashing.



 
Next character




Next character



Next character



Press ▲ or ▼ buttons to scroll through characters.

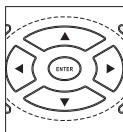

Press ► to move forward, ◀ to move back a character.

4. Press the CLEAR button on the front of the remote to clear a character or insert a space. The name will be automatically centered when editing is complete.


5. When finished press the EDIT button or wait 15 seconds to exit Edit mode.

## SETTING A MACRO

 A Macro is a chain of commands actioned by a single button press. Any storage button on the LRC4.6 can contain a Macro of up to 20 steps. Delays of 1-99 seconds can be programmed between steps if desired.

### EXAMPLE:

Creating a Macro called from the "⏻" button in the SOURCE 2 device page that turns on a CD player, waits 10 seconds, selects Track One and then Play.



1. Select the device bank that contains the button to hold the Macro (SOURCE 2 for this example).



 
2. On the back of the remote press LEARN/MACRO (using a paperclip or similar) twice to enter Macro mode.



The display shows "MACRO?".



3. Press the button to contain the Macro (⏻ for this example).




The display will show "M.POWER" to confirm that the Macro will be entered into the ⏻ button.



The display will then show "STEP 1" to confirm that the first Macro step is required.

 **Note:** If a button is not pressed within approximately 15 seconds the LRC4.6 will exit Macro mode.



4. For this example, by pressing and holding the ON button for 10 seconds a 10 second delay is selected before the next step is performed. A counter in the top right of the display counts up from 1-99 seconds. Letting go of the ON button when the counter reaches 10 selects the 10 second delay. If no delay is required, press and release the ON button immediately.

Press and hold any Macro step to select a delay of 1-99 seconds before the next step is performed.

Continued on Page 12.

## SETTING A MACRO cont.



5. The display will show "STEP 2".



Press the "1" button



6. The display will show "STEP 3".



Press the Play (▶) button.



7. The display will show "STEP 4".  
On the back of the remote press the LEARN/MACRO button to finish, as no fourth step is required for this particular Macro.



The display will show "MAR.OK!" to confirm the Macro has been successfully learnt

## OPERATING A MACRO

To call a Macro simply press the button that you taught the Macro into. The display will then show the steps and count down any delays programmed as the Macro is played back.

### NOTES ON MACROS

Macros can be programmed into the source buttons in the same way as the storage buttons. In this case the first code sent out by the source button Macro will always be the source buttons own code, followed by the steps that you program in.

This first code will be the pre-coded Jamo source code or a new code if the source codes have been replaced with a learnt code as per the LEARNING CODES INTO DEVICE BUTTONS section.

A Macro cannot contain as a step a button that also contains a Macro. If you do program a Macro button as a step in another macro the LRC4.6 will not do anything for this step, but all other steps will work as expected.


Delays of 1-99 seconds can be programmed between Macro steps, the default delay (if no delay is specified) is 0.5 seconds.

The dedicated Jamo multi-room system buttons CANNOT contain Macros.

## CLONING

For ease of setup where a user may have more than one LRC4.6, the complete contents of a remote (IR codes, Macros, button names and clock settings) can be transferred to another LRC4.6 remote by a "cloning" process. One remote must be set to transmit mode whilst the other set to receive mode, while joined by a cloning cable.

On the back of the remote press the EDIT button 4 times (using a paperclip or similar) on BOTH remotes to enter Clone mode. "REC/TRX" will appear on both the displays.

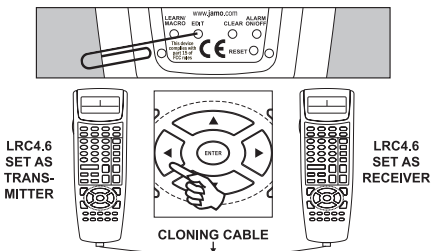

For the transmitting LRC4.6,  
Press the ◀ button until  
"TRX" is flashing.



For the receiving LRC4.6,  
Press the ◀ button until  
"REC" is flashing.



Press ENTER on the  
receiving remote.  
Display shows "WAITING".



Press ENTER on the  
transmitting remote.  
Display shows "SENDING".




The receiving remote display  
will now show "REC-ING" to  
indicate it is receiving data.

After approximately 7 minutes the displays should show "OK!" and return to normal operation. All data has been transferred. If the clone fails the receiver remote will show "ERROR" then "CL-REPT" (Clone Repeat). Put the transmitting remote back into Clone mode and repeat the process. A successful clone must be done to the receiving remote once the done process has been started, as cloning overwrites the complete software in the receiving remote.

## CLEARING STORED DATA

 1. To clear the IR code data in a single button, first select the device bank (SOURCE 1 etc) that contains that button then press the CLEAR button on the back of the remote once (using a paperclip or similar).



When the display shows "CLR KEY?" press the button to be cleared.

Note: Clearing a button does not affect the buttons name if it has been edited. Clearing a device button resets the code to the Jamo pre-code.

2. To clear the IR code data in a whole device bank press the CLEAR button twice.



When the display shows "CLR DEV?" press the device button for the device bank (SOURCE 1 etc) to be cleared. All buttons in that device bank will be cleared.

Note: Clearing a device button does not affect the device name or any button names if they have been edited, but does clear all codes and Macros, and recovers the Jamo pre-code for the device bank button.

3. To clear ALL the IR code data and Macros in the remote including all device, button and pre-code names and all button names, press the CLEAR button 3 times.



When the display shows "CLR ALL?" press and hold the ENTER button for approx 4 seconds.




The display will show "CLEARING", and may take a minute or so to complete.

4. After each clearing operation (Clear Key, Clear Device or Clear All) the LRC4.6 will automatically exit Clearing mode.

Note: When clearing, all source/device button codes will be returned to their factory default Jamo codes.

## OPERATING THE REMOTE CONTROL

### NORMAL OPERATION

1. Press a device button.
2. Press the desired storage button. If no IR code data is stored, the display shows EMPTY. If an IR code is present in the button the  symbol will appear whilst the code is sent.

### BUTTON AND DISPLAY BACKLIGHTING

Press the light button to turn on the remote's backlight function. All the buttons and the LCD display will light up for night time viewing.

### LOW BATTERY INDICATOR

When the battery is low, a battery symbol appears on the display.



When the battery symbol starts flashing, all remote functions are locked until fresh batteries are installed.

### RESET

Press the RESET button to restart the LRC4.6. After reset, all data remains, but the real time clock and date have to be set again. Reset is used in the unlikely event that the LRC4.6 locks up due to static discharge or other unforeseen events.

### AVAILABLE CHARACTER TABLE



COMPLIANCE WITH FCC RULES:  
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.  
OPERATION IS SUBJECT TO THE FOLLOWING TWO  
CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL  
INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY  
INTERFERENCE RECEIVED, INCLUDING INTERFERENCE  
THAT MAY CAUSE UNDESIRE OPERATION.

Note: The manufacturer is not responsible for any radio or TV  
interference caused by unauthorised modifications to this  
equipment. Such modifications could void the user's  
authority to operate the equipment.



The Jamo LRC4.6 Learning Remote Control  
complies with the Electromagnetic Compatibility  
(89/336/EEC) Directive when used according  
to this user guide.



A-BUS and A-BUS Ready are  
registered trademarks of LeisureTech Electronics  
Pty Ltd Australia



Jamo US Inc. is a member of the  
Custom Electronic Design & Installation Association

[www.jamo.com](http://www.jamo.com)